


# Hitachi WH-1160

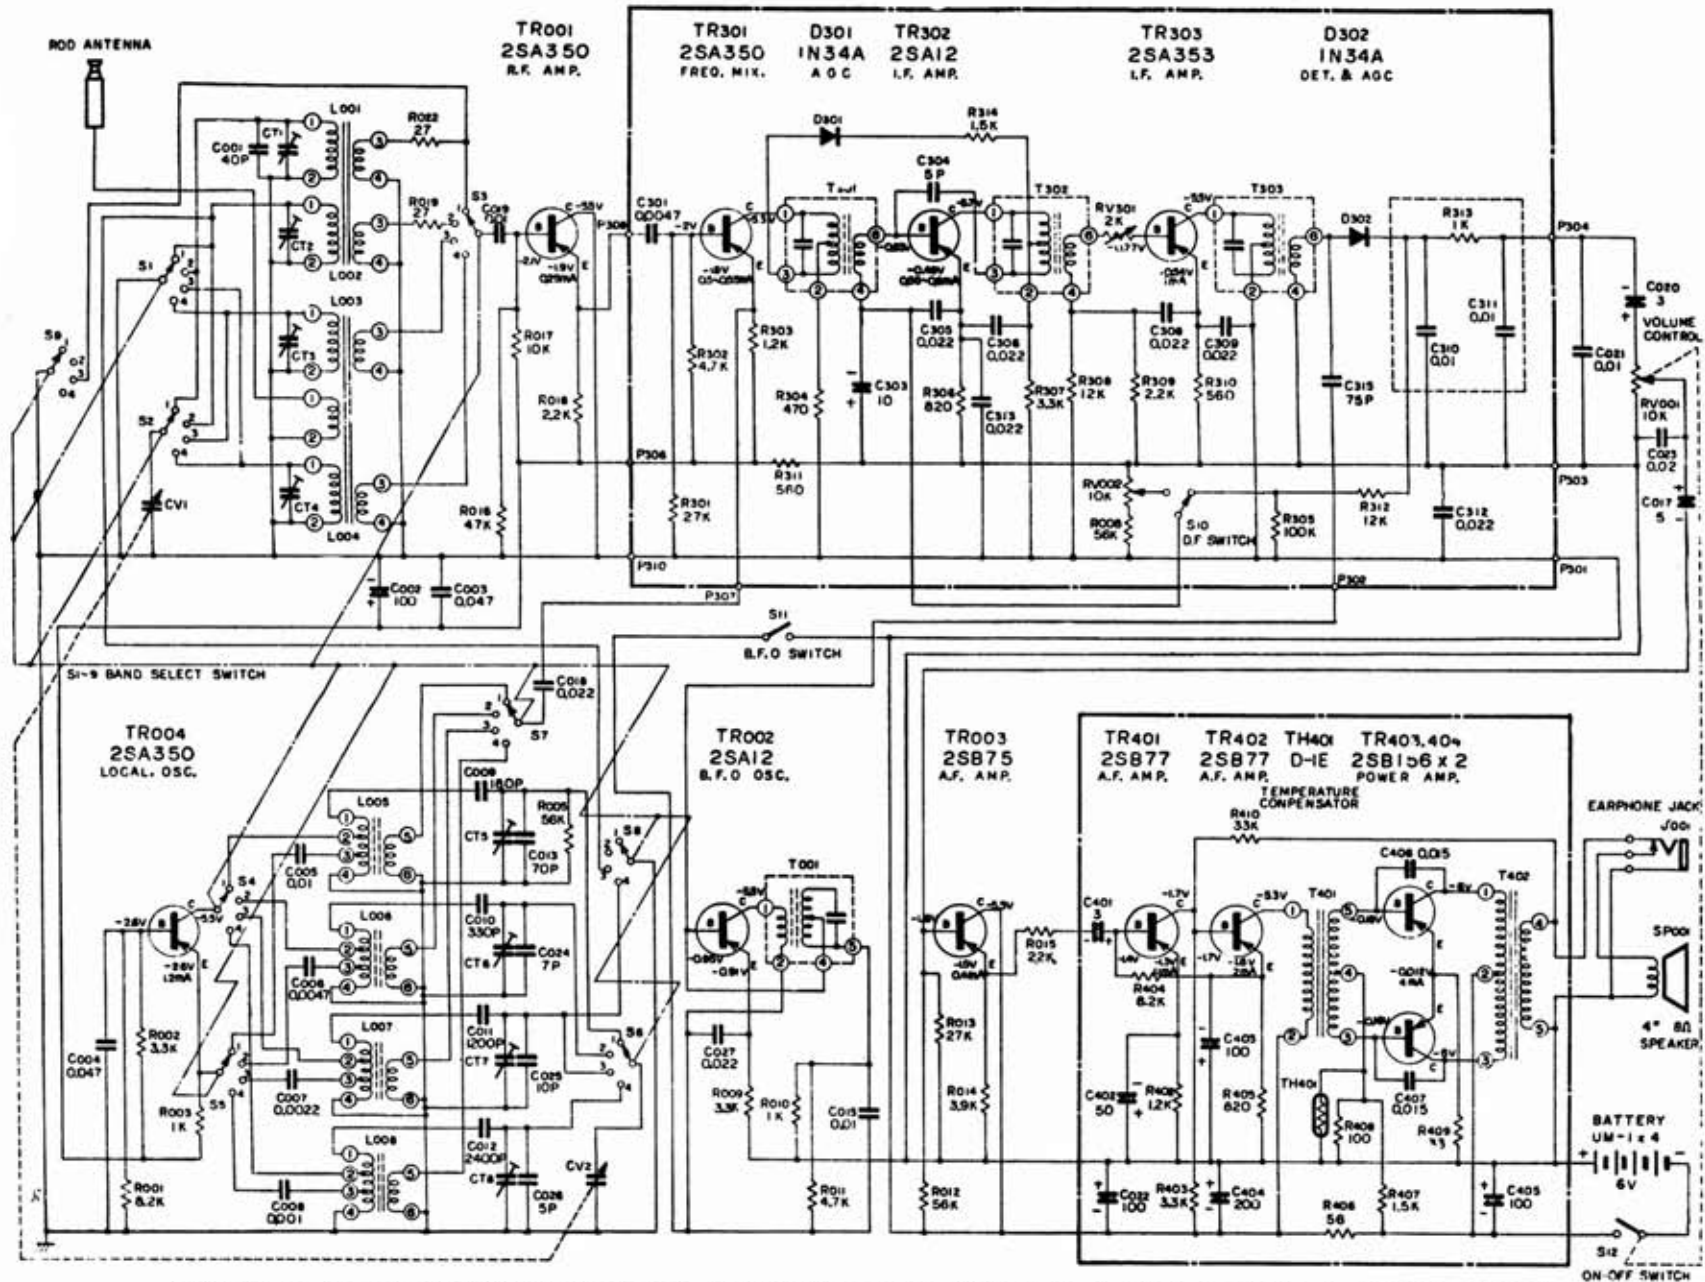

- NOTE 1) Numbers of the band switch (S1~9) are as follows: 1. LW 2. MW 3. Marin 4. SW  
 2) Radio-D.F. switch is shown in Radio position.  
 3) S11 shows B.F.O. switch.