

# NATIONAL HG-720

2SA103CA

0A70Y

2SA103CA


2SA102BA

0A70X


2SB173B

2SB175B

2SB172A×2

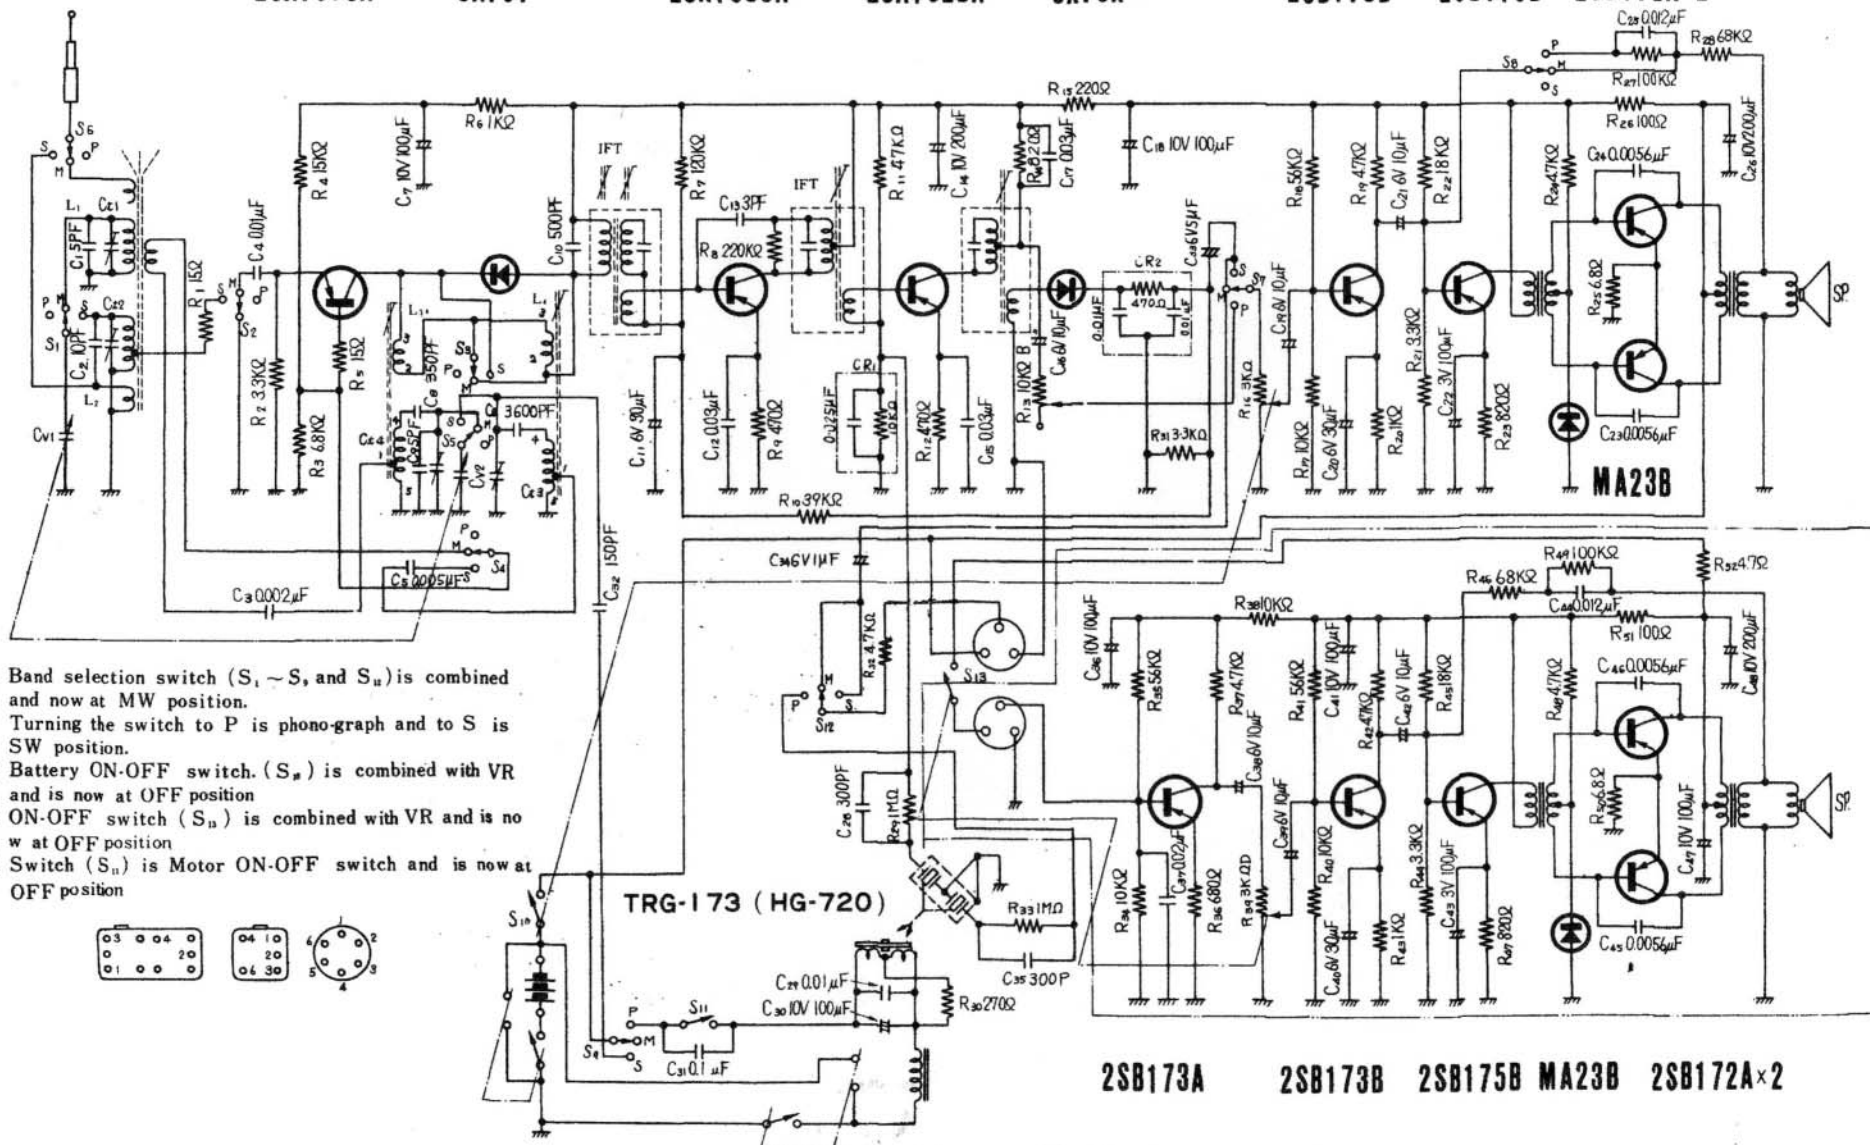

1. Band selection switch ( $S_1$ ,  $S_2$ , and  $S_u$ ) is combined and now at MW position. Turning the switch to P is phono-graph and to S is SW position.
2. Battery ON-OFF switch ( $S_u$ ) is combined with VR and is now at OFF position
3. ON-OFF switch ( $S_u$ ) is combined with VR and is now at OFF position
4. Switch ( $S_u$ ) is Motor ON-OFF switch and is now at OFF position

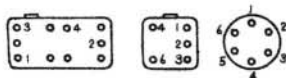

2SB173A

2SB173B

2SB175B

MA23B

2SB172A×2