



- SELECTION
- | | | |
|-------------------|----------------|----------------|
| (1) MODE SELECTOR | (2) SELECTOR 1 | (3) SELECTOR 2 |
| 1. MIX | 1. SW | 1. FM/MPX |
| 2. STEREO-R | 2. MW | 2. FM |
| 3. STEREO-N | 3. PHONO | 3. MW |
| 4. MONO-1 | 4. AUX | 4. PHONO |
| 5. MONO-2 | | 5. AUX |

パイオニア SM-B180