





- S1 SELECTOR
 (1) JMC
 (2) FM MONO
 (3) FM STEREO
 (4) FM AUTO
 (5) PHONO
 (6) TAPE HEAD
 (7) AUX

 S2 MODE SELECTOR
 (1) STEREO
 (2) LEFT
 (3) RIGHT

 SLIDE SWITCH
 S10 VOLTAGE SELECTOR 100V ↔ 117V

 PUSH SWITCH
 S11 POWER SWITCH ON — OFF

 VARIABLE RESISTOR
 VR1 TREBLE CONTROL
 VR2 BASS CONTROL
 VR3 BALANCE CONTROL
 VR4 MAIN VOLUME
 VR5 MPX SEPARATION CONTROL

SECTION	ITEM NUMBER	Q/C/M
1 PRINT CIRCUIT BOARD (A) AM 9129	R ₁₁ ~ R ₁₉ C ₁ ~ C ₁₀	
2 PRINT CIRCUIT BOARD (B) AM 9130	R ₂₁ ~ R ₂₇ , R ₂₈ , R ₂₉ ~ R ₃₄ C ₁₁ ~ C ₁₈ , C ₁₉ ~ C ₁₈	Co, Co
3 PRINT CIRCUIT BOARD (C) AM 9131	R ₃₁ ~ R ₃₃ C ₂₁ ~ C ₂₃ , C ₂₄ , C ₂₅	Co, Co
4 PRINT CIRCUIT BOARD (D) AM 9132	R ₄₁ ~ R ₄₂ C ₃₁ ~ C ₃₂	Co, Co
5 OTHERS	R ₁ ~ R ₁₀ , R ₁₁ ~ R ₁₀ , R ₁₁ , R ₁₂ ~ R ₁₁ , R ₁₂ C ₁ ~ C ₁₀ , C ₁₁ ~ C ₁₀ , C ₁₁ , C ₁₂ ~ C ₁₀ , C ₁₁ , C ₁₂	

- Q₁, Q₂ 2SB347
 Q₃ ~ Q₆ 2SB345
 Q₇ ~ Q₁₁, Q₁₂ 2SB54
 Q₁₃, Q₁₄ 2SB343
 Q₁₅ ~ Q₁₈ 2SD47
 Q₁₉ 2SB378
- ◇ NO INPUT SIGNAL D.C CURRENT
 V NO INPUT SIGNAL D.C VOLTAGE
 (V) MAX INPUT SIGNAL D.C VOLTAGE
 (V) RIPPLE VOLTAGE
 ★ MAX INPUT SIGNAL D.C CURRENT

SX-60T形のオーディオ部回路