


	J Band	U Band
C <sub>1</sub>	15P	10P
C <sub>2</sub>	15P	10P
C <sub>35</sub>	10P	20P
C <sub>44</sub>	500P	800P

- CERAMIC
- △ OIL
- MICA
- MYLAR
- MP con

LAST	
R <sub>188</sub>	C <sub>185</sub>

# 山水 SAX-100

## アンプ部

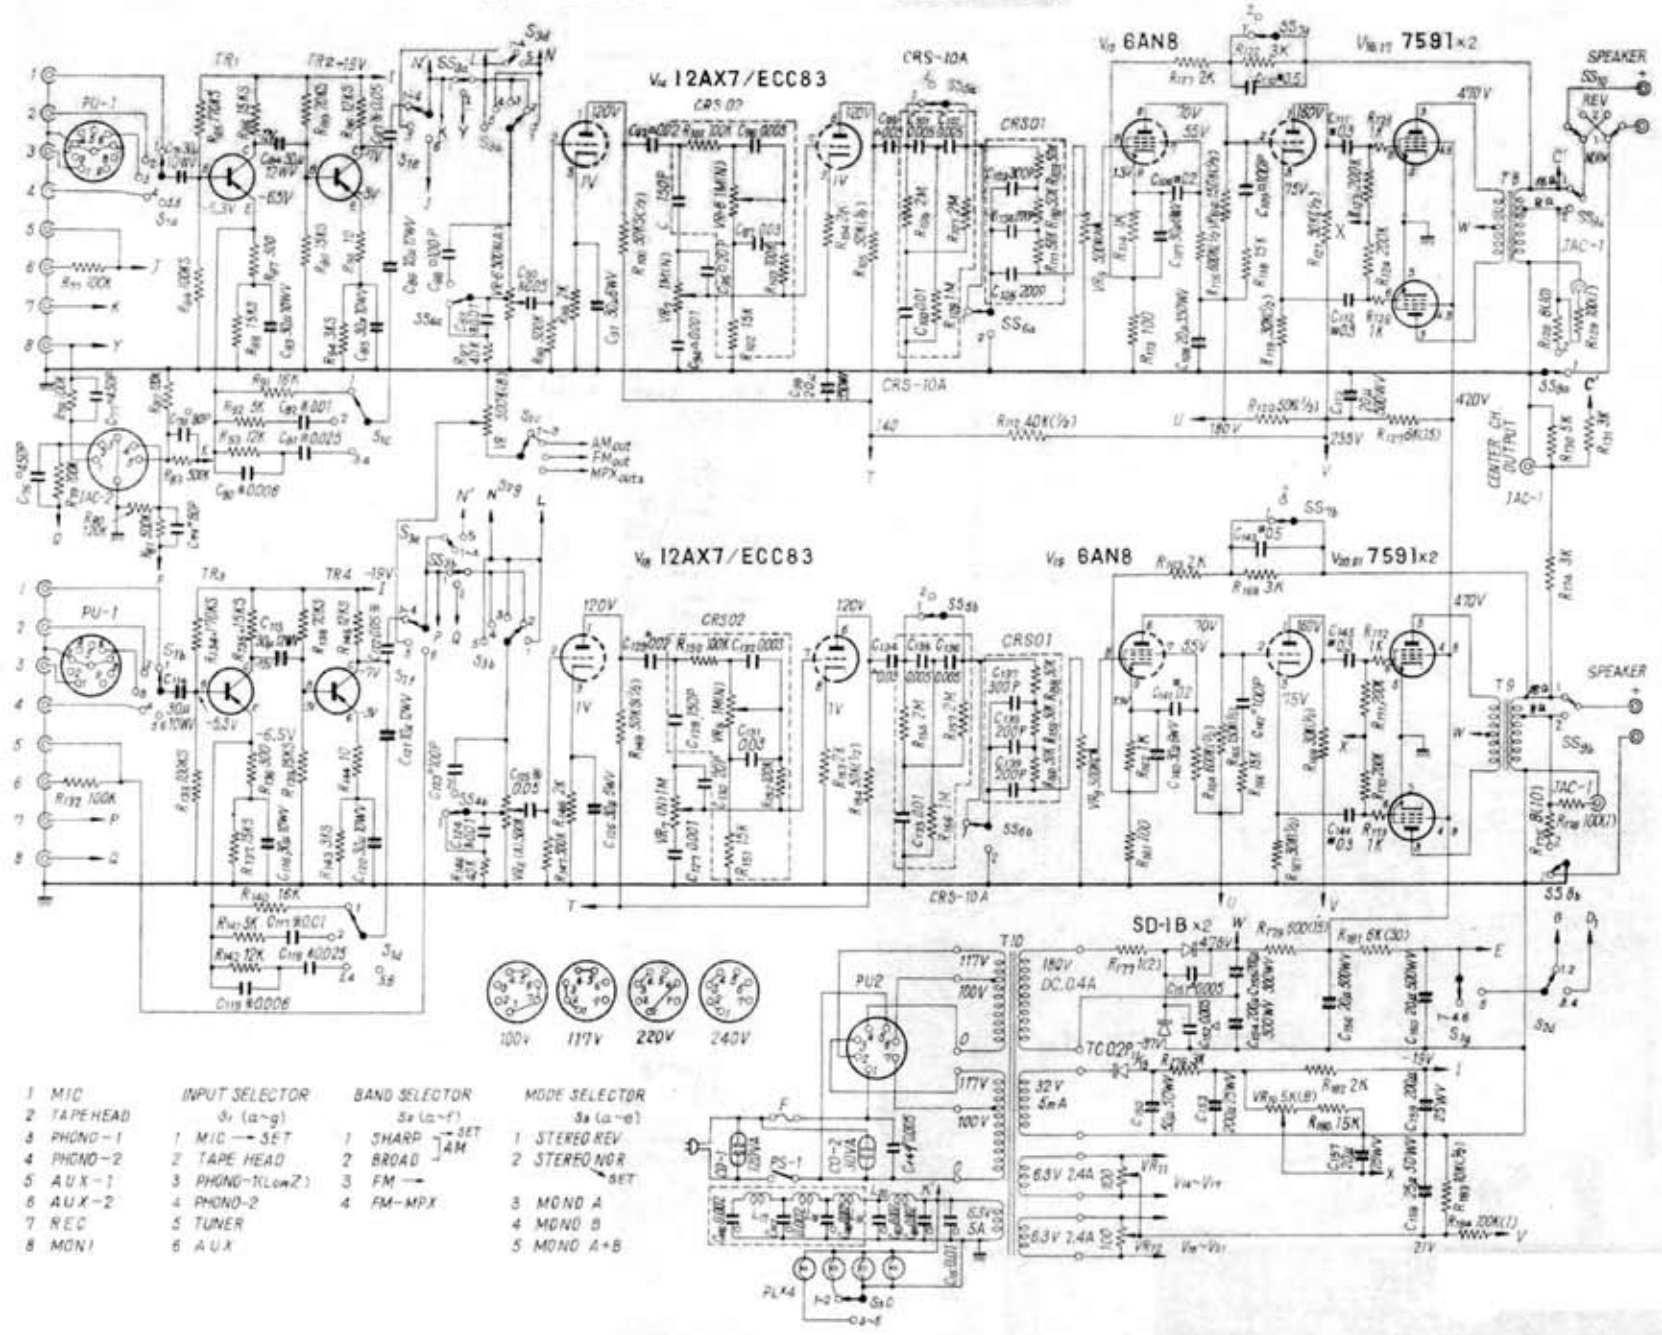

- |             |                 |               |               |
|-------------|-----------------|---------------|---------------|
| 1 MIC       | INPUT SELECTOR  | BAND SELECTOR | MODE SELECTOR |
| 2 TAPE HEAD | 3 (a-g)         | 3a (a-f)      | 1 STEREO REV  |
| 3 PHONO-1   | 1 MIC → SET     | 1 SHARP → SET | 2 STEREO NR   |
| 4 PHONO-2   | 2 TAPE HEAD     | 2 BROAD → SET |               |
| 5 AUX-1     | 3 PHONO-1(LowZ) | 3 FM →        |               |
| 6 AUX-2     | 4 PHONO-2       | 4 FM-MPX      |               |
| 7 REC       | 5 TUNER         |               |               |
| 8 MON1      | 6 AUX           |               |               |

