
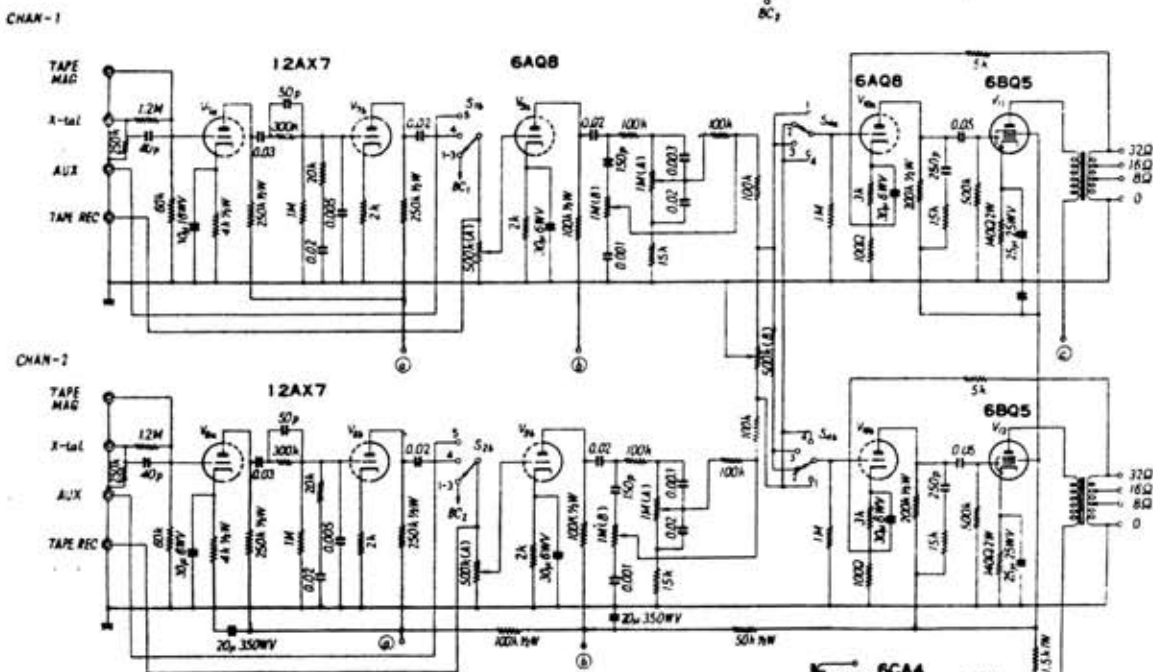


SM-11B

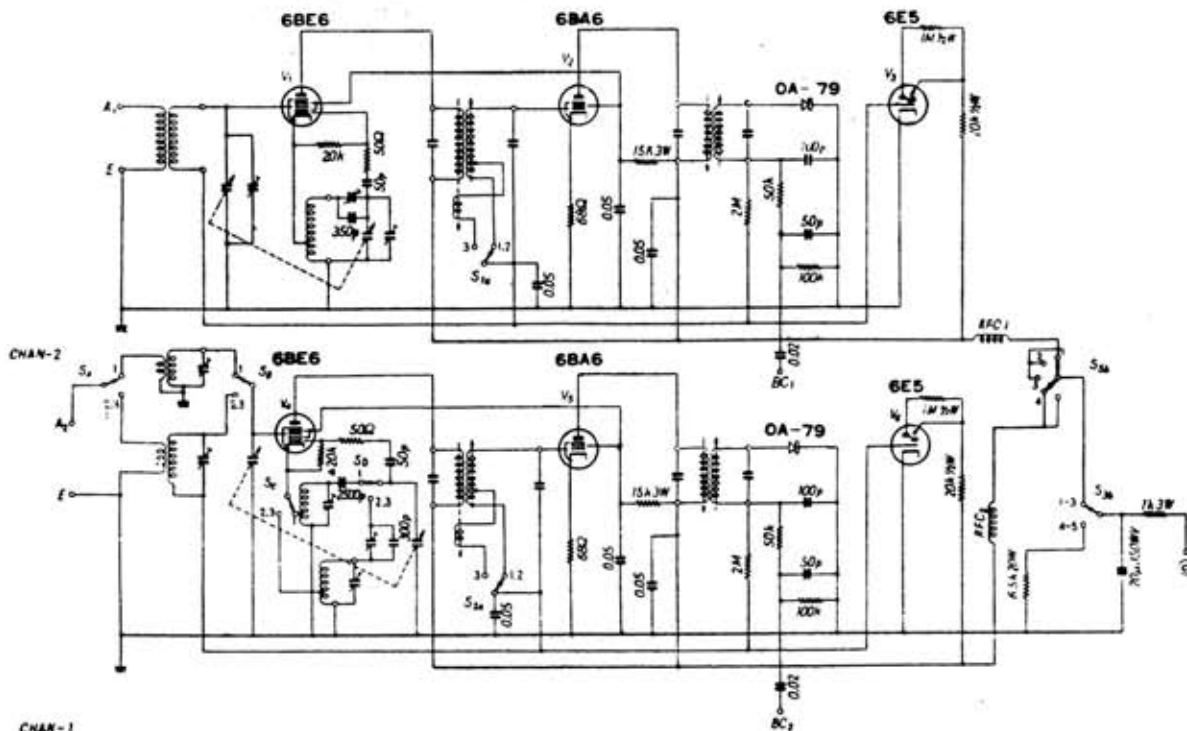

SELECTOR
 (S₁, S₂, S₃, S₄, S₅, S₆)

- 1 SW
- 2 ROT
- 3 PHONO, TAPE
- 4 AUX
- 5

MODE
 (S₁, S₂, S₃, S₄, S₅)

- 1 NORMAL STEREO
- 2 REVERSE
- 3 CHAN-1 MONO
- 4 CHAN-2 MONO

