


山水 SAX-2000

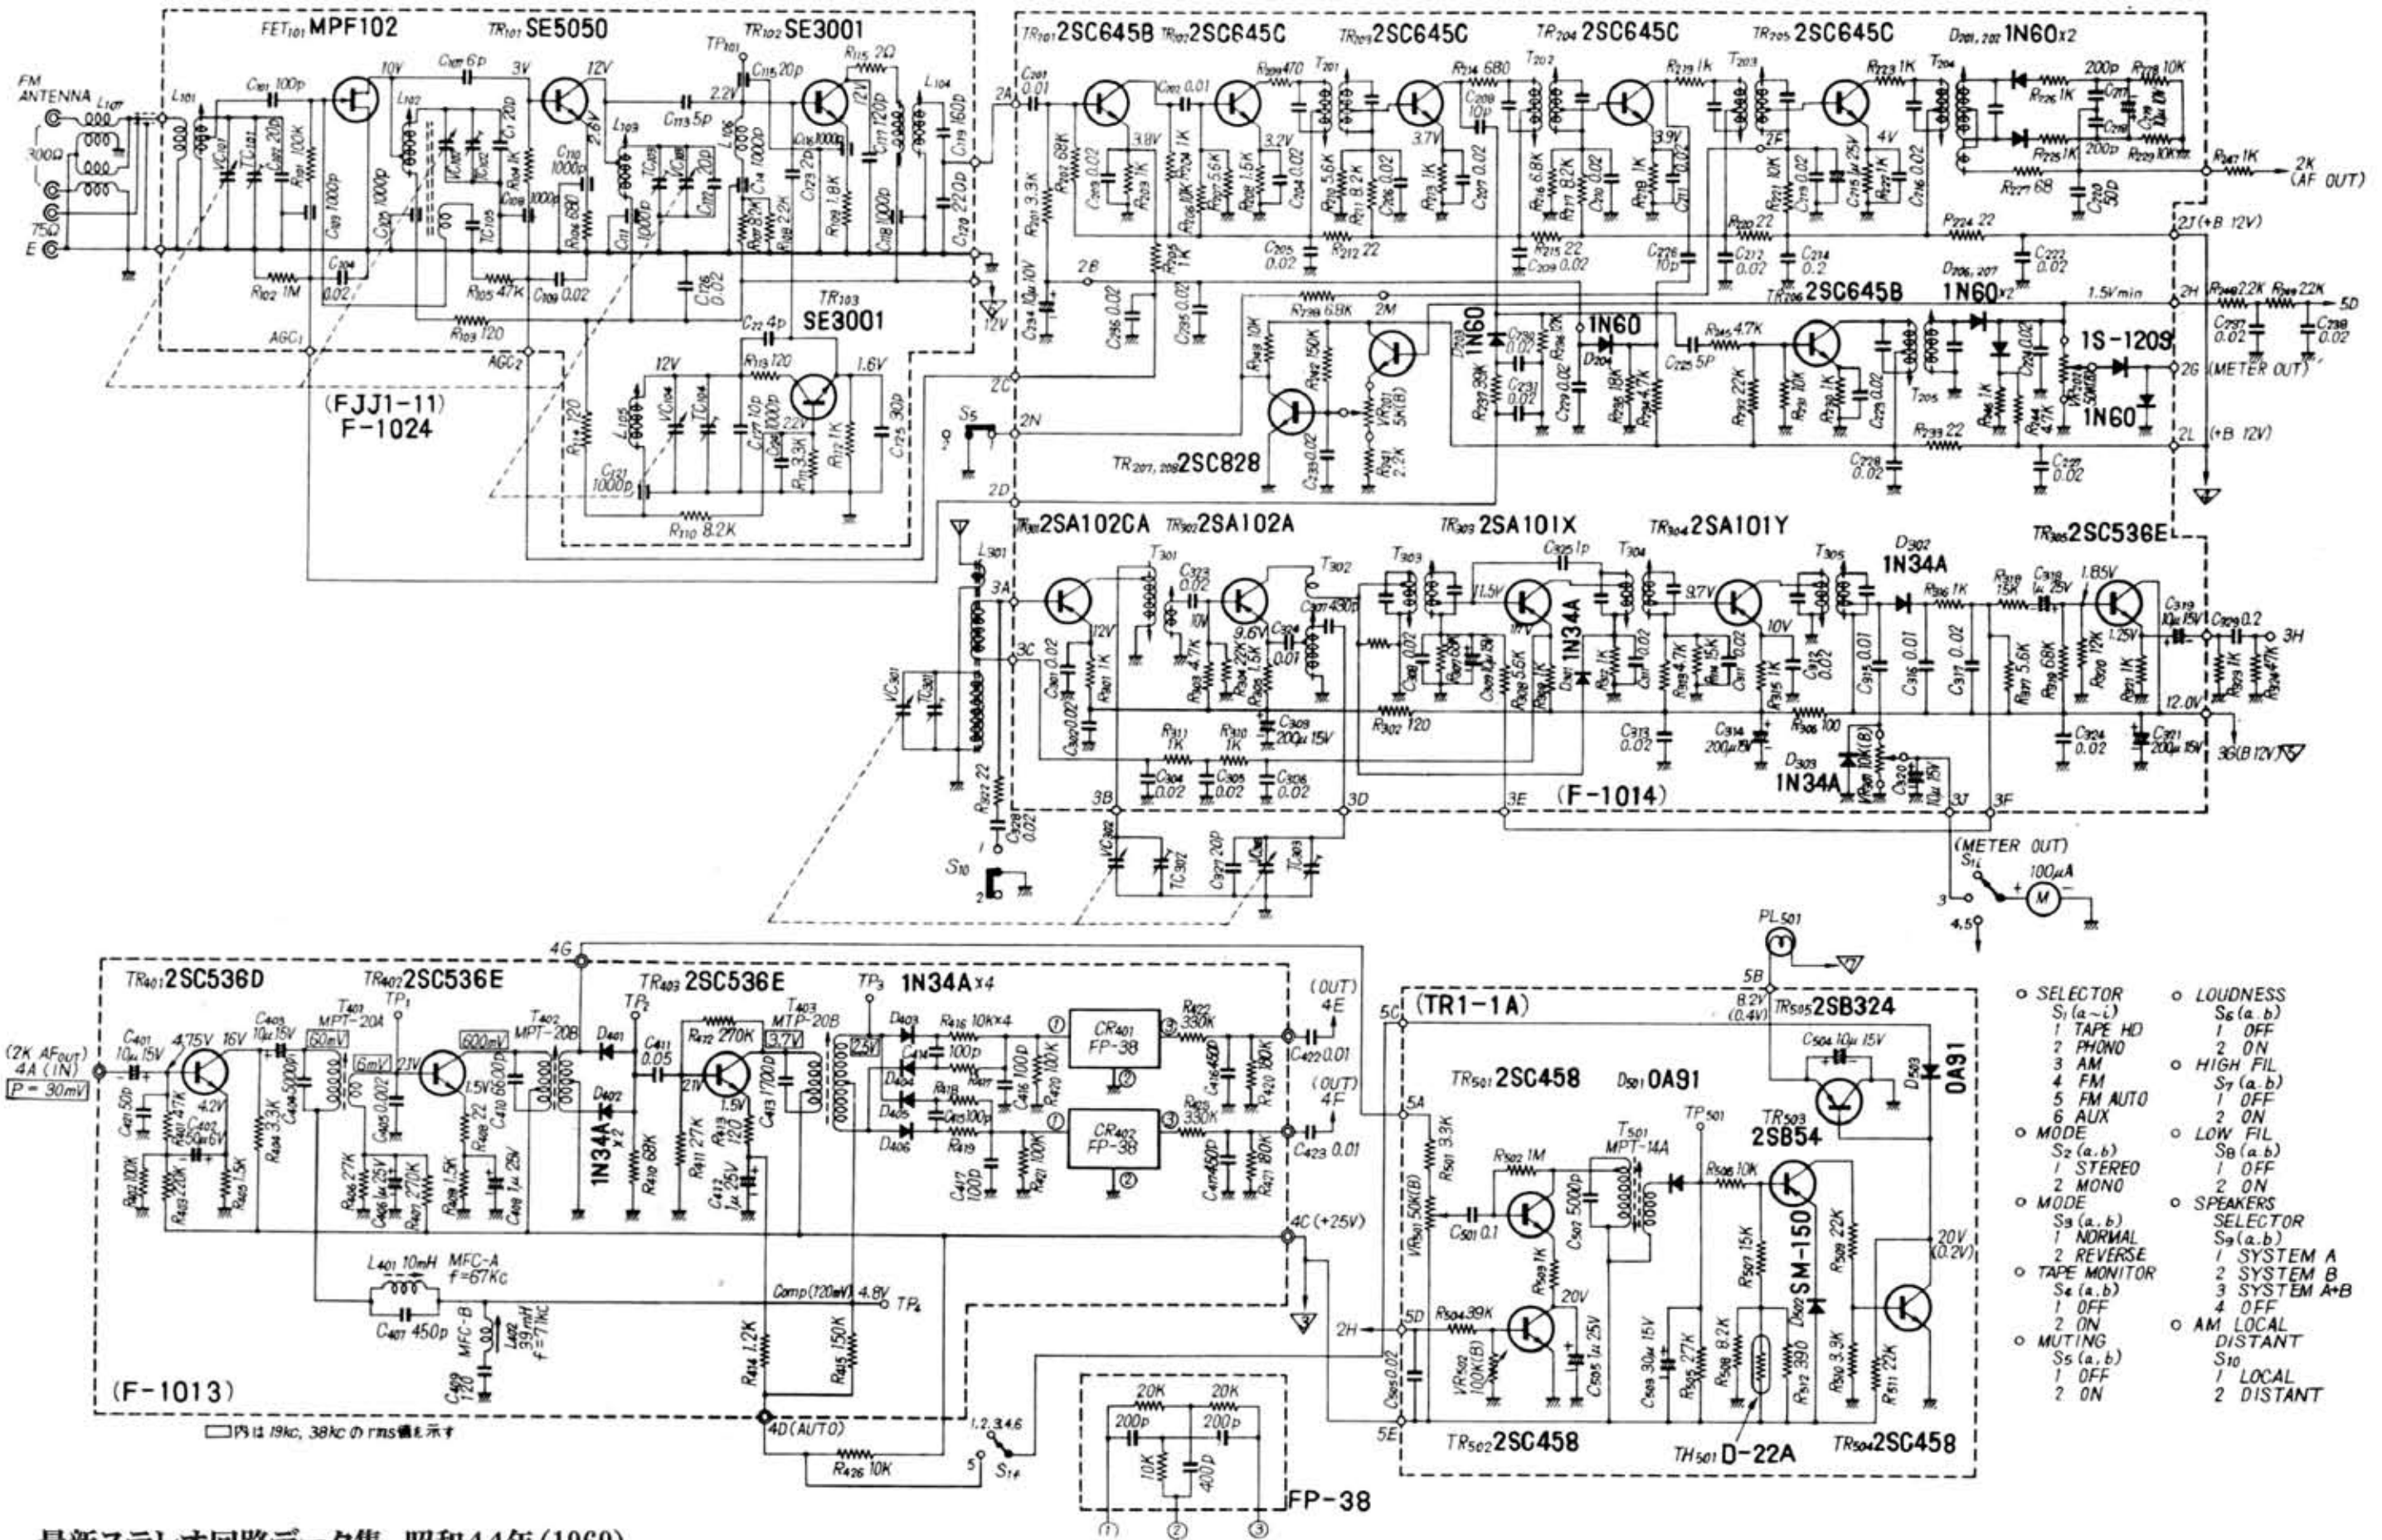

- SELECTOR
S1(a-i)
1 TAPE HD
2 PHONO
3 AM
4 FM
5 FM AUTO
6 AUX
- MODE
S2(a,b)
1 STEREO
2 MONO
- MODE
S3(a,b)
1 NORMAL
2 REVERSE
- TAPE MONITOR
S4(a,b)
1 OFF
2 ON
- MUTING
S5(a,b)
1 OFF
2 ON
- LOUDNESS
S6(a,b)
1 OFF
2 ON
- HIGH FIL
S7(a,b)
1 OFF
2 ON
- LOW FIL
S8(a,b)
1 OFF
2 ON
- SPEAKERS
SELECTOR
S9(a,b)
1 SYSTEM A
2 SYSTEM B
3 SYSTEM A+B
4 OFF
- AM LOCAL
DISTANT
S10
1 LOCAL
2 DISTANT

山水 SAX-2000

