

SHARP

BP-314

TR-1

TR-3

TR-4

TR-6

TR-7

TR-8 TR-9


IFT-1
ZLC-404
97K:1K

IFT-2
ZC-135
30K:500

IFT-3
ZC-189
20K:5K

T-1
6T-735
8K:3K

T-2
7T-728
350:11

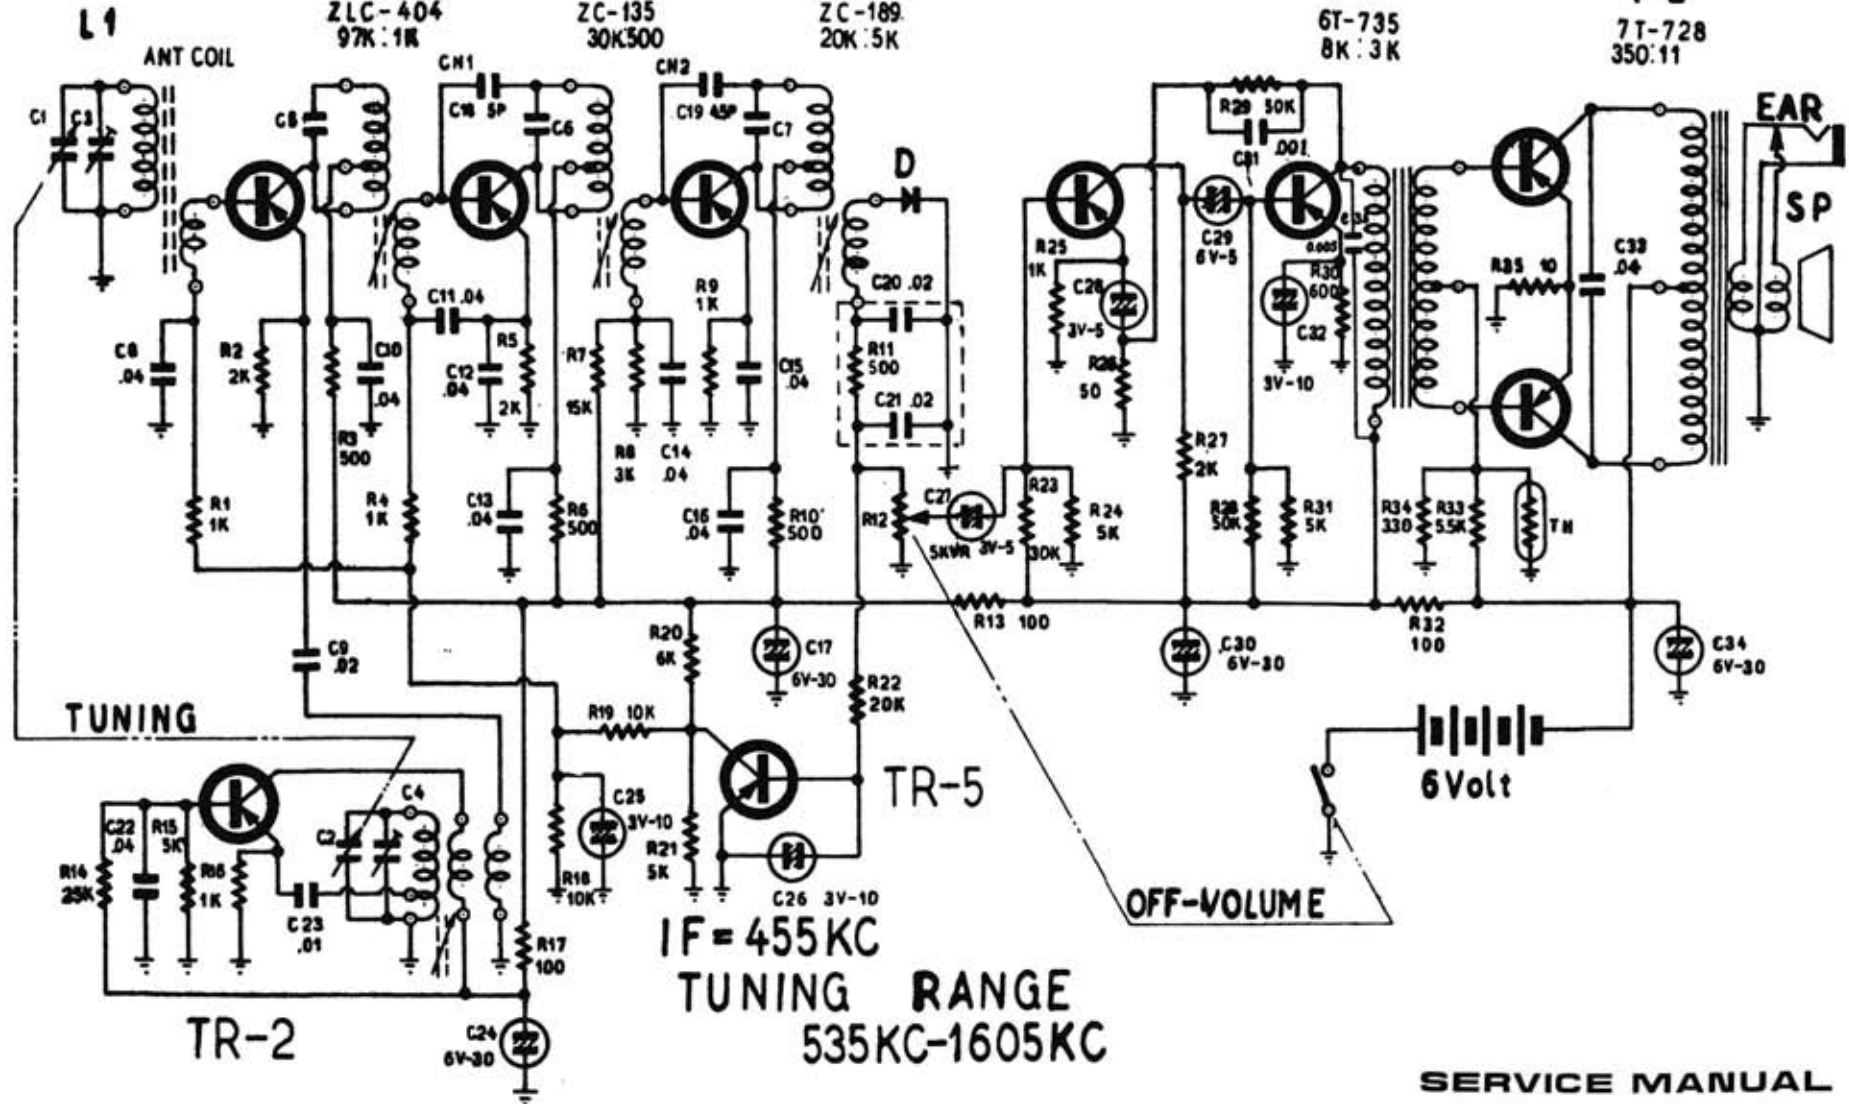

SERVICE MANUAL