

SHARP BXS-330

TR1

TR2

TR4


TR5

TR6

TR7

TR8

TR9 TR10

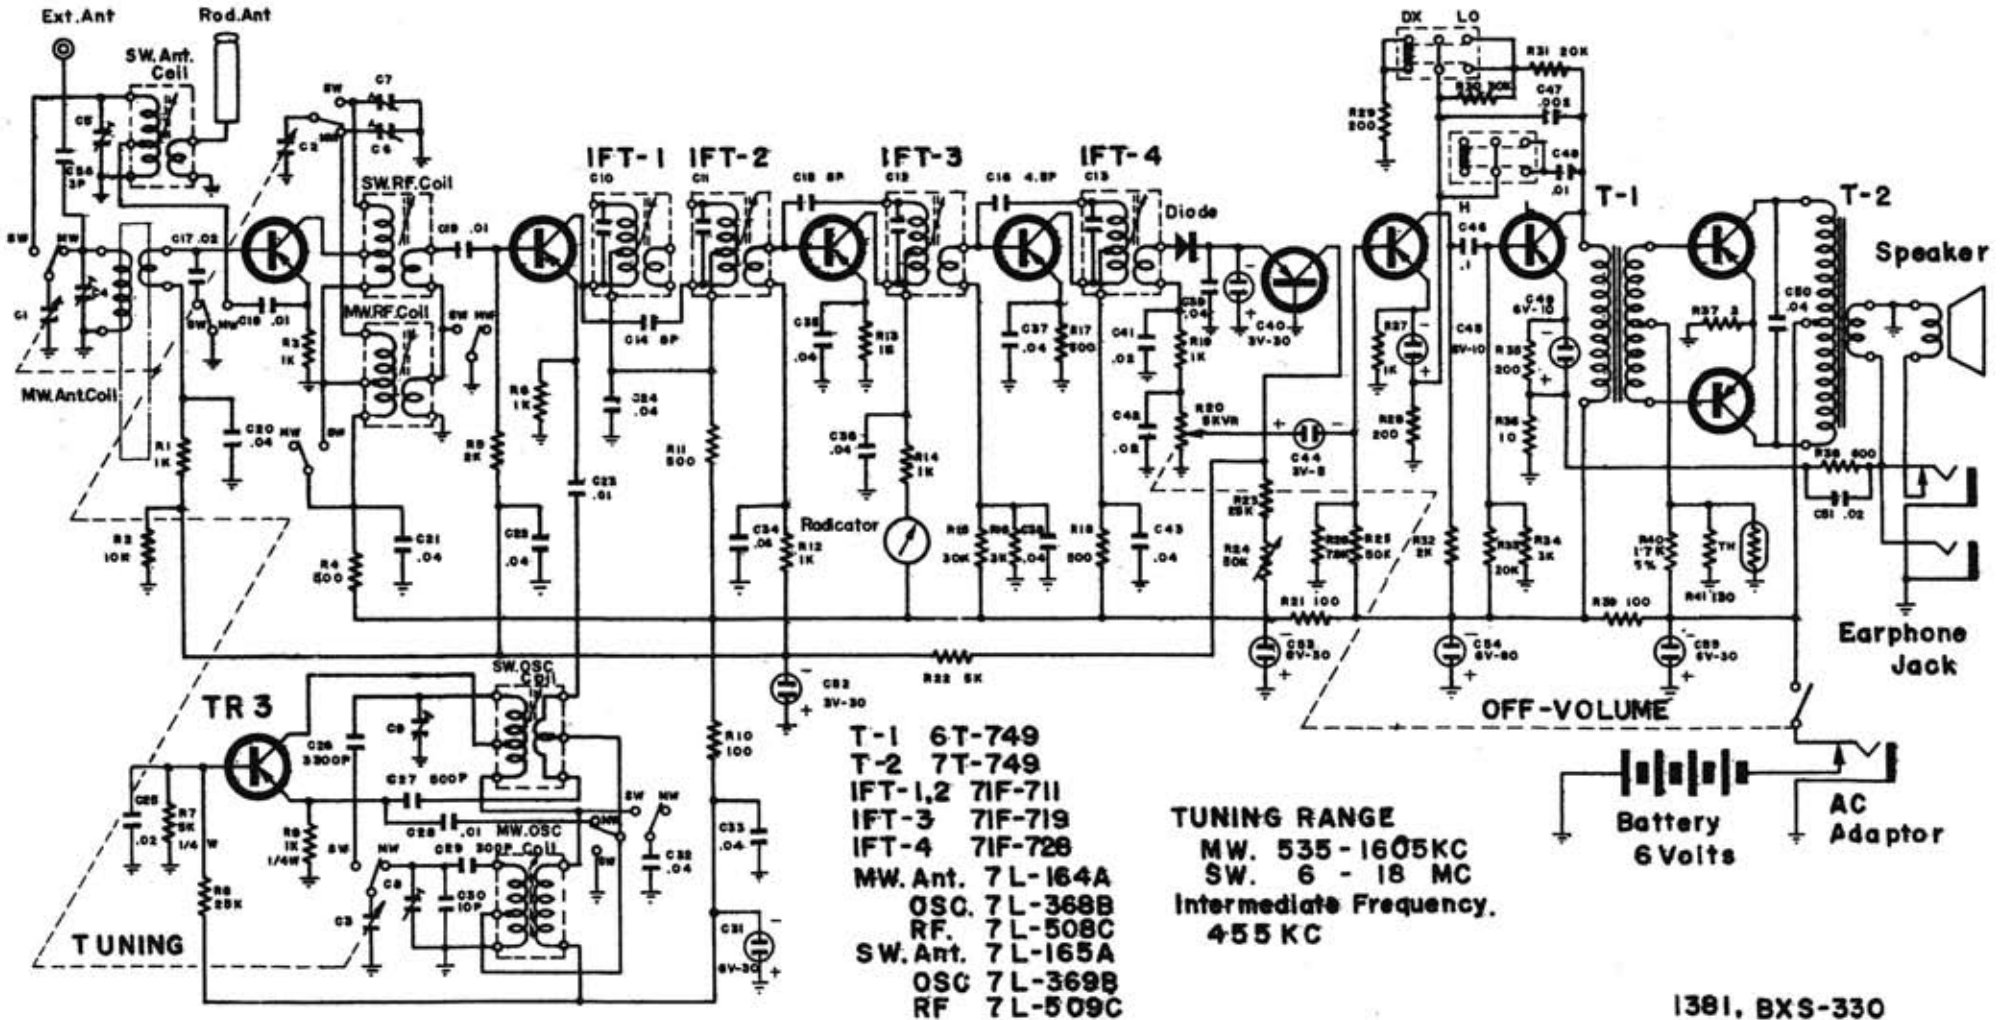

1381. BXS-330

SERVICE MANUAL