


SHARP FX-401

TR1 TR2 TR3 TR4 TR5 TR6 TR7 TR8 TR9

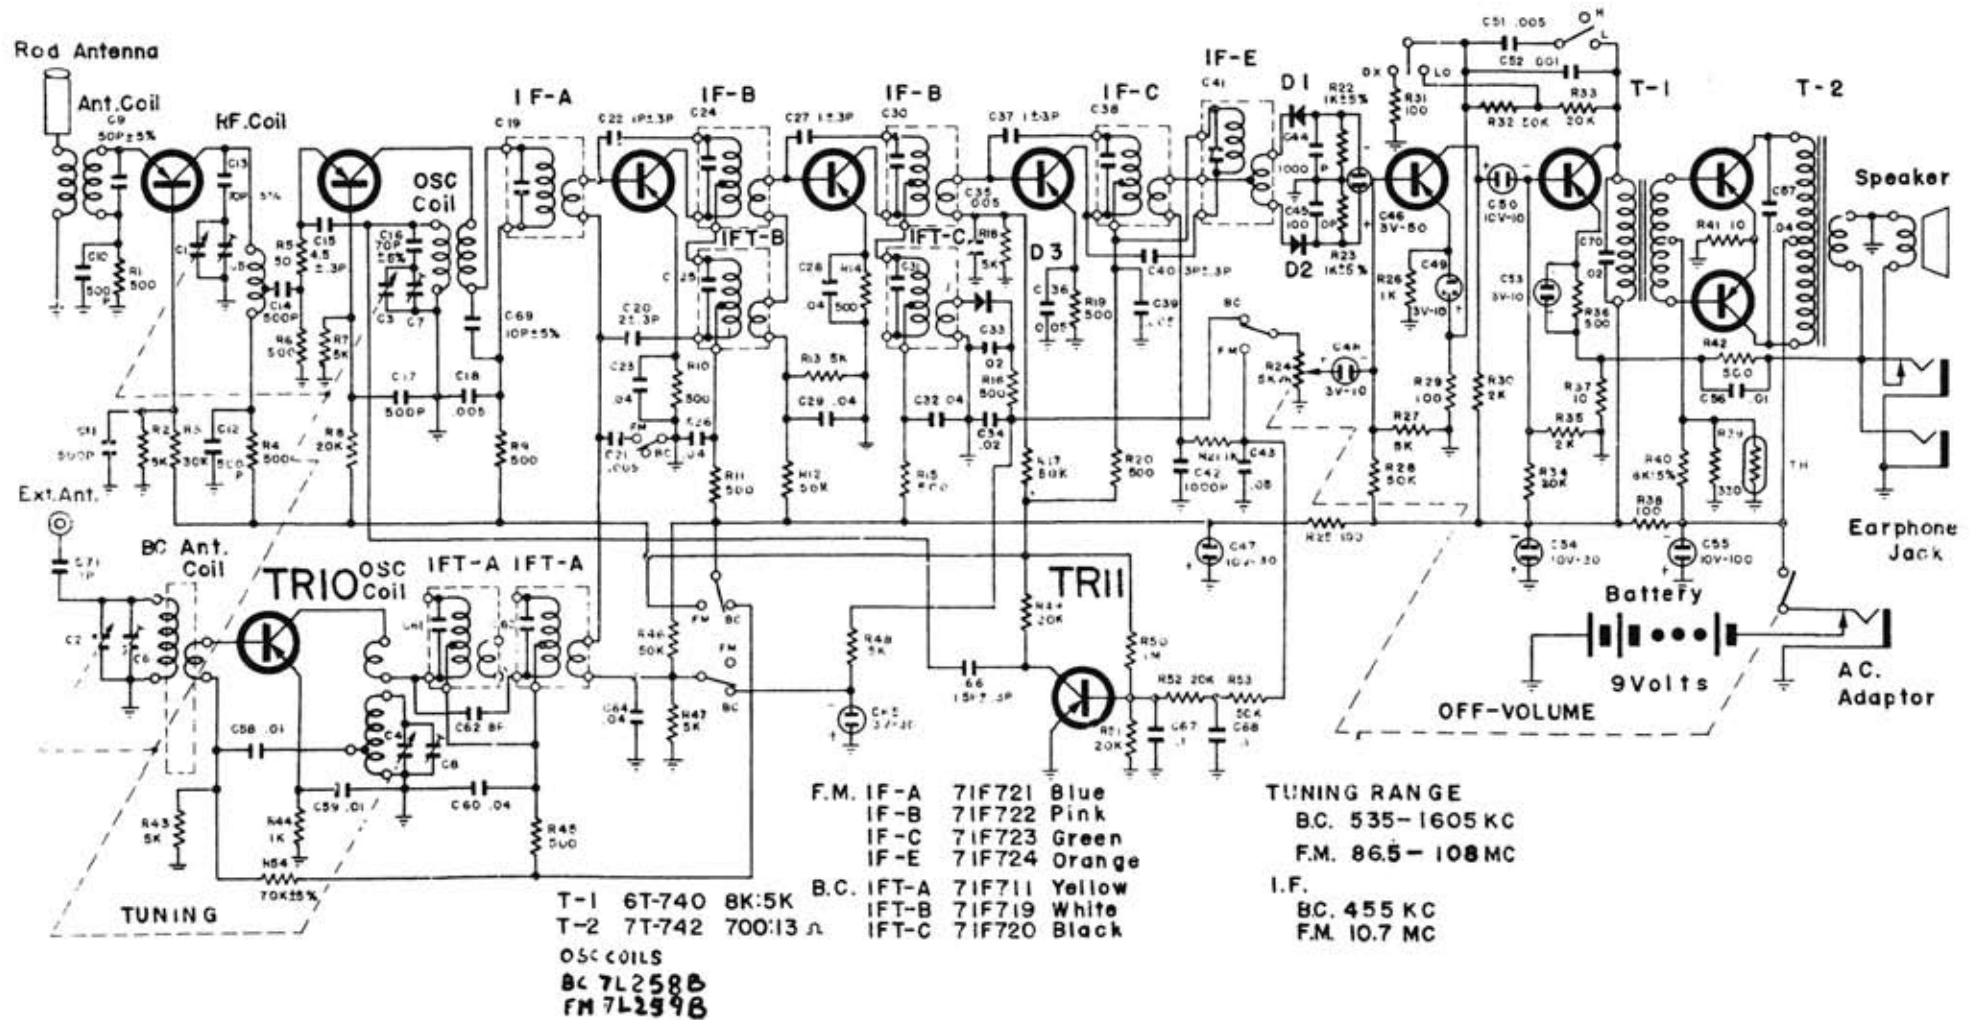

SERVICE MANUAL