




# ソニー STR-6060

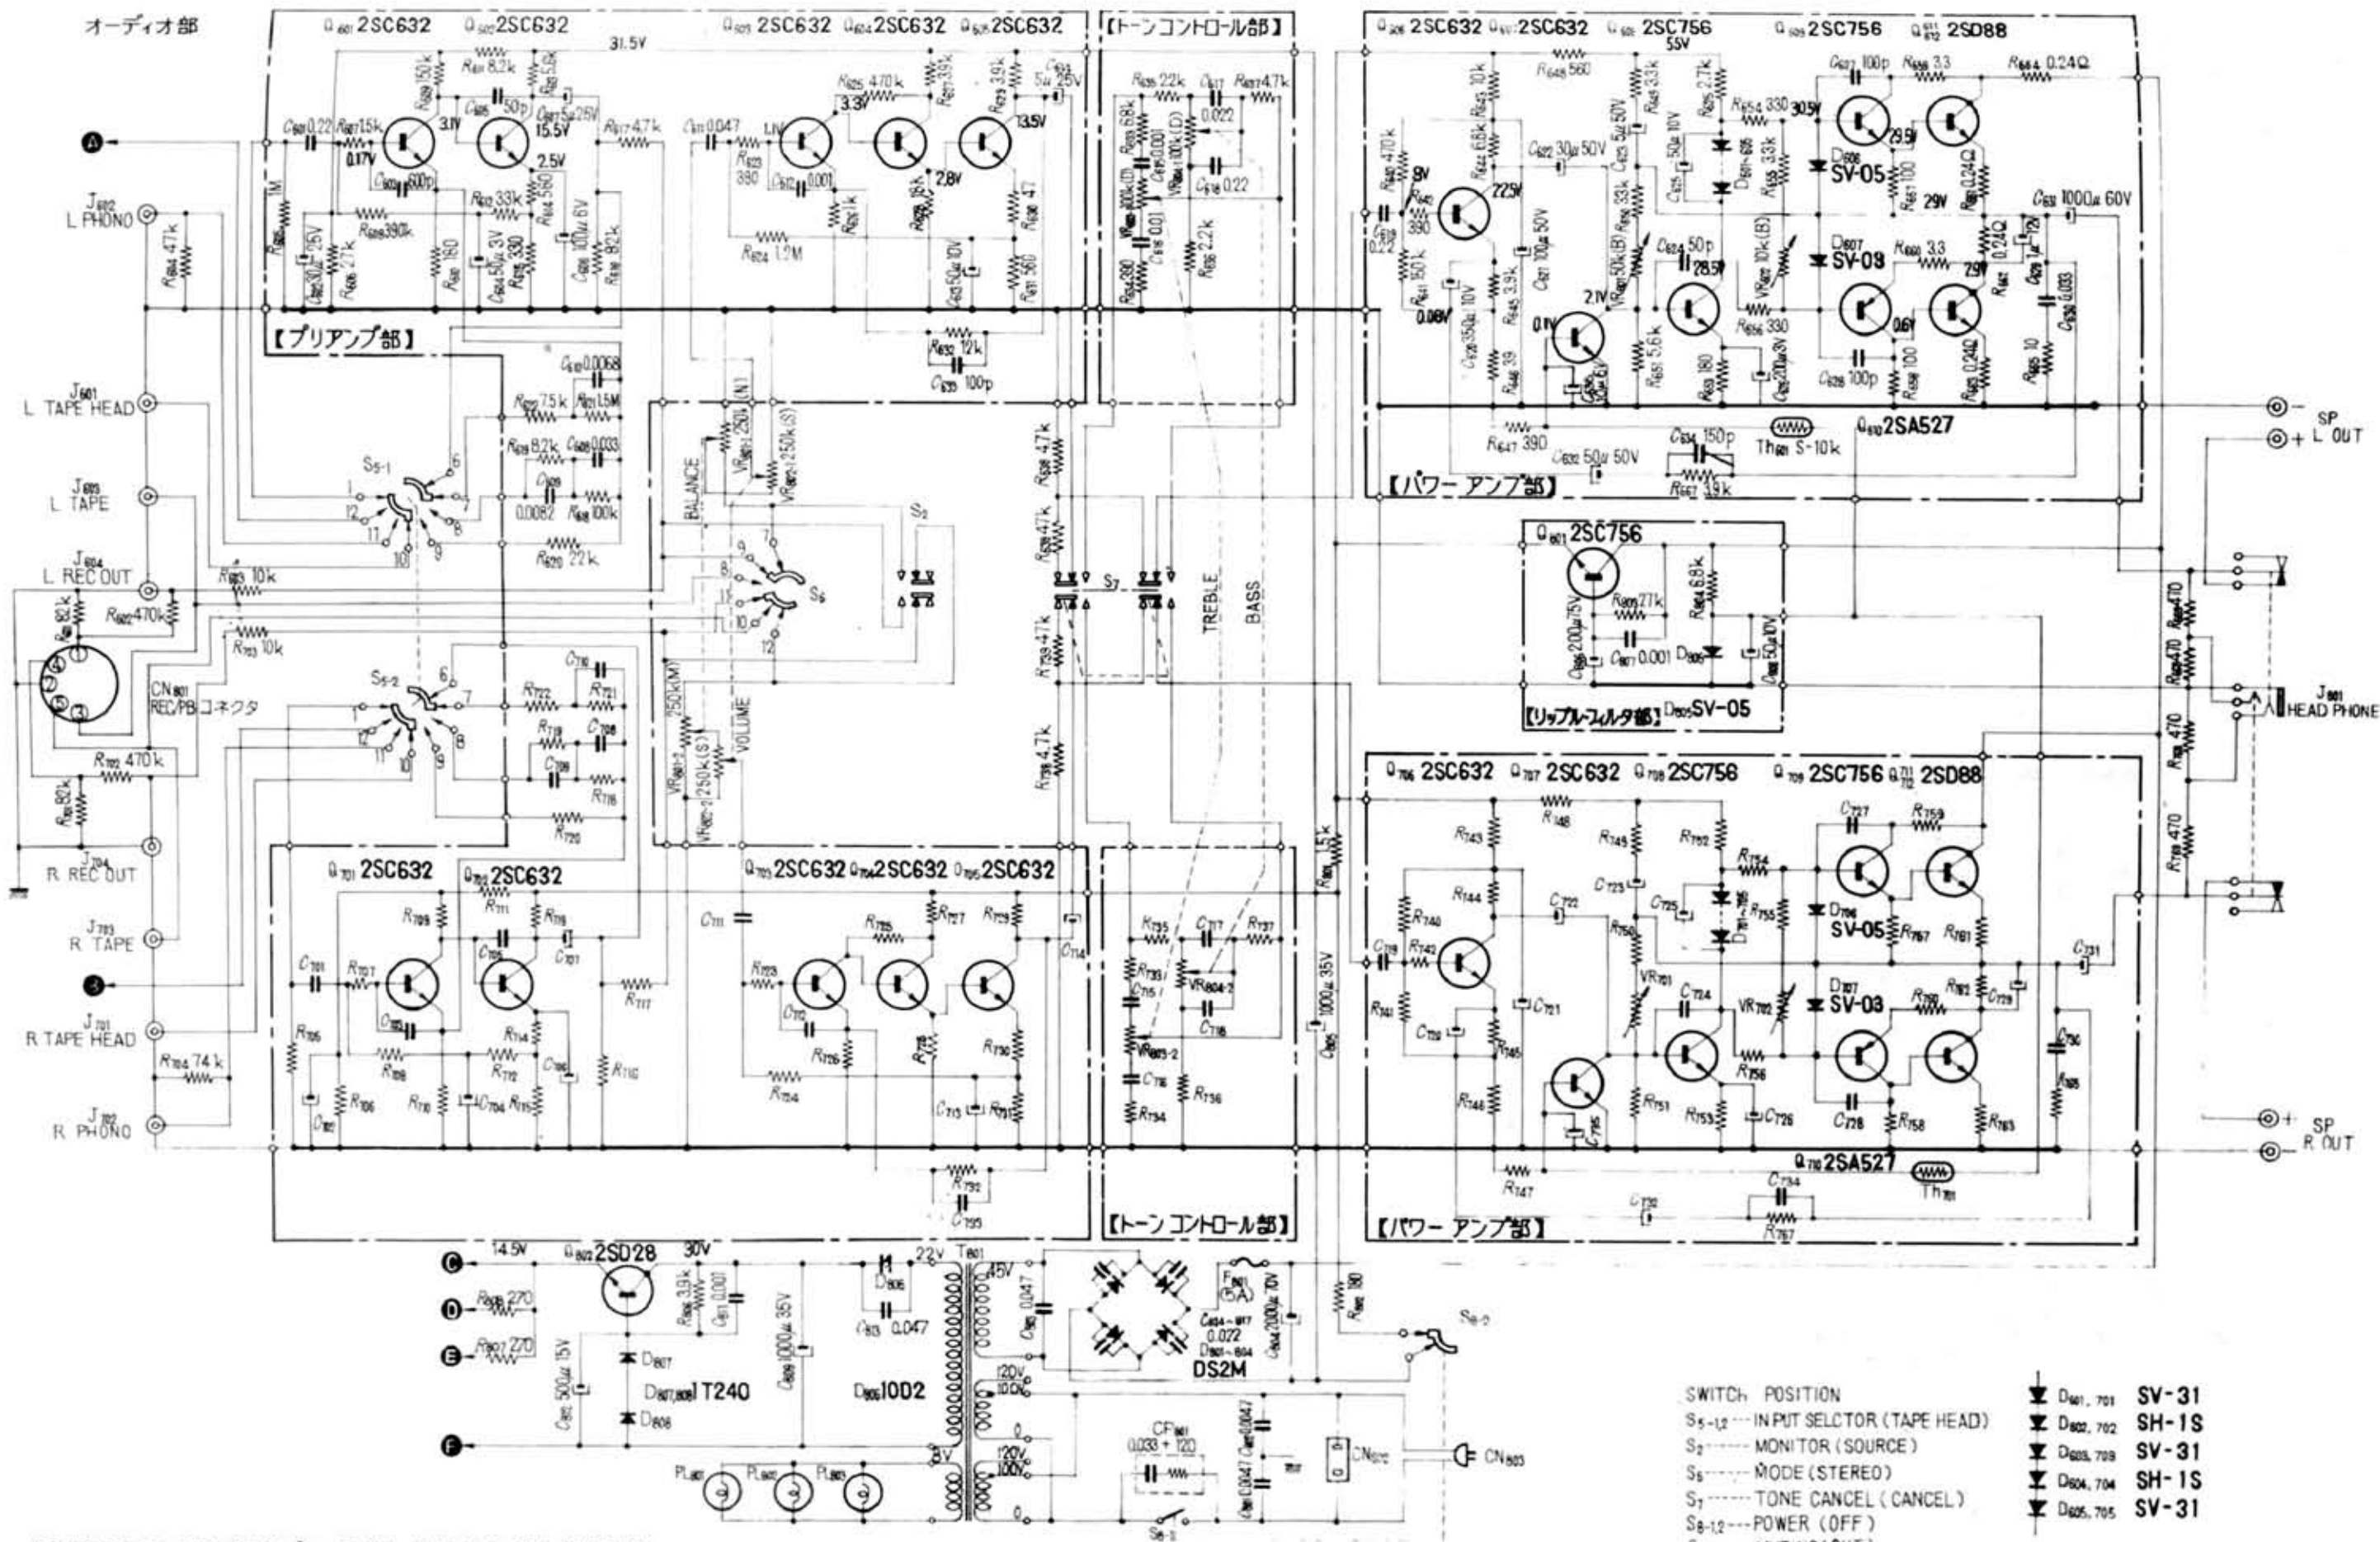

- SWITCH POSITION
- S<sub>5-1,2</sub> --- IN PUT SELCTOR (TAPE HEAD)
  - S<sub>2</sub> --- MONITOR (SOURCE)
  - S<sub>6</sub> --- MODE (STEREO)
  - S<sub>7</sub> --- TONE CANCEL (CANCEL)
  - S<sub>8-1,2</sub> --- POWER (OFF)
  - S<sub>4</sub> --- MUTING (OUT)
- ▼ D<sub>601, 701</sub> SV-31
  - ▼ D<sub>602, 702</sub> SH-1S
  - ▼ D<sub>603, 703</sub> SV-31
  - ▼ D<sub>604, 704</sub> SH-1S
  - ▼ D<sub>605, 705</sub> SV-31