

SONY TR-1815


X1 2SC73

X2 2SC76

X3 2SC76 D IT23G


X4 2SD65

X5, X6 2SD65

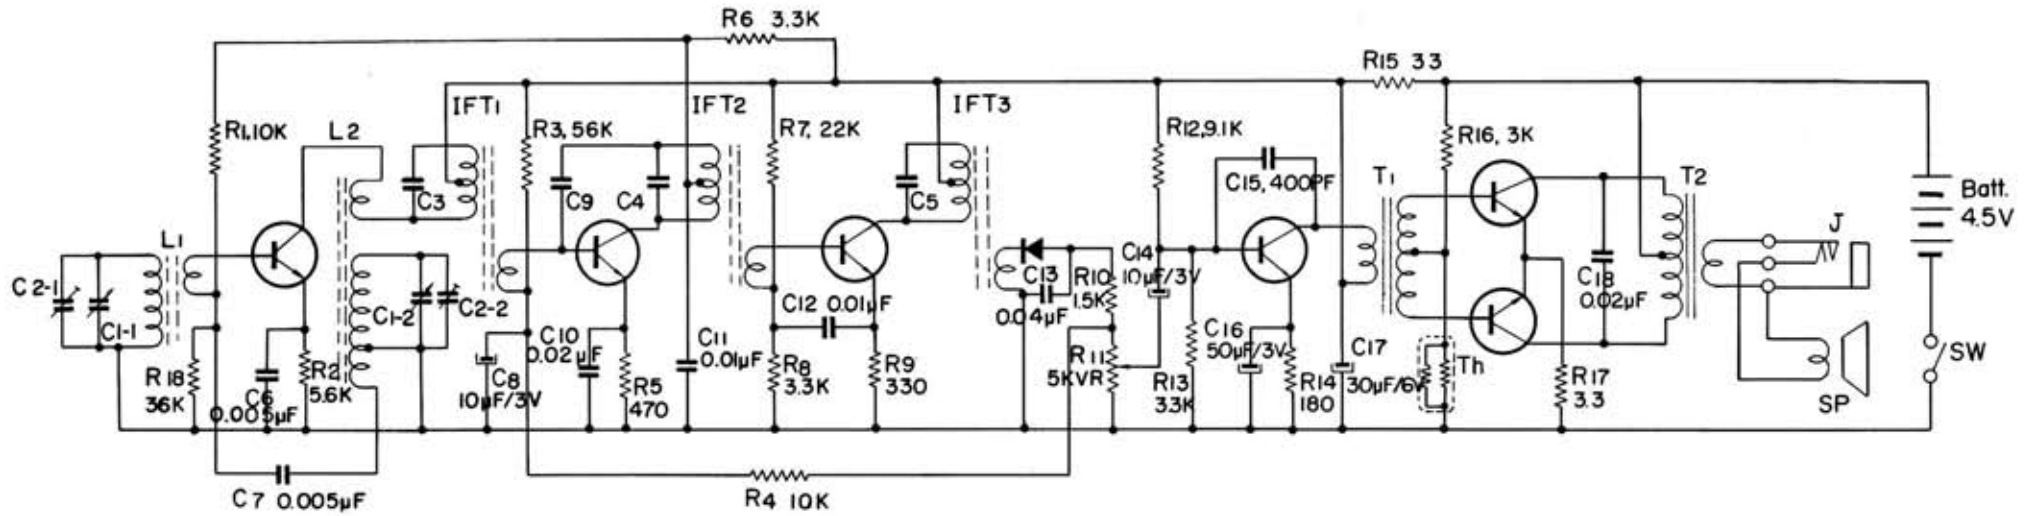

Voltage and Current Distribution Chart at Zero Signal

X1 X2 X3 X4 X5 X6

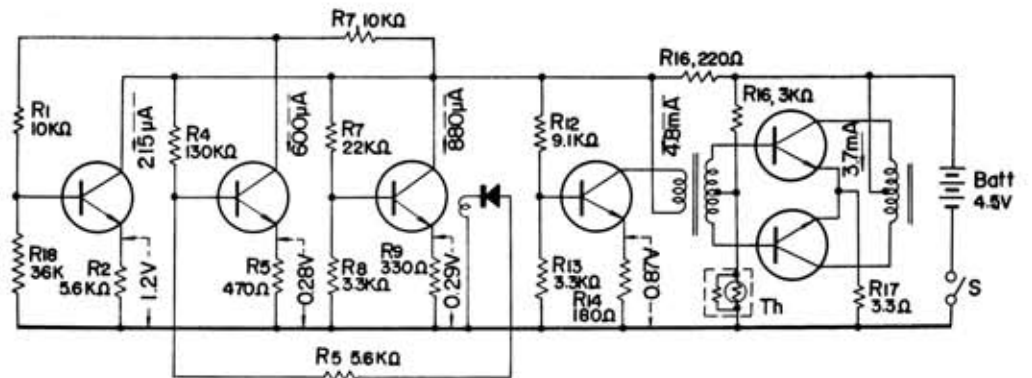

SERVICING GUIDE