


SONY TR-1817

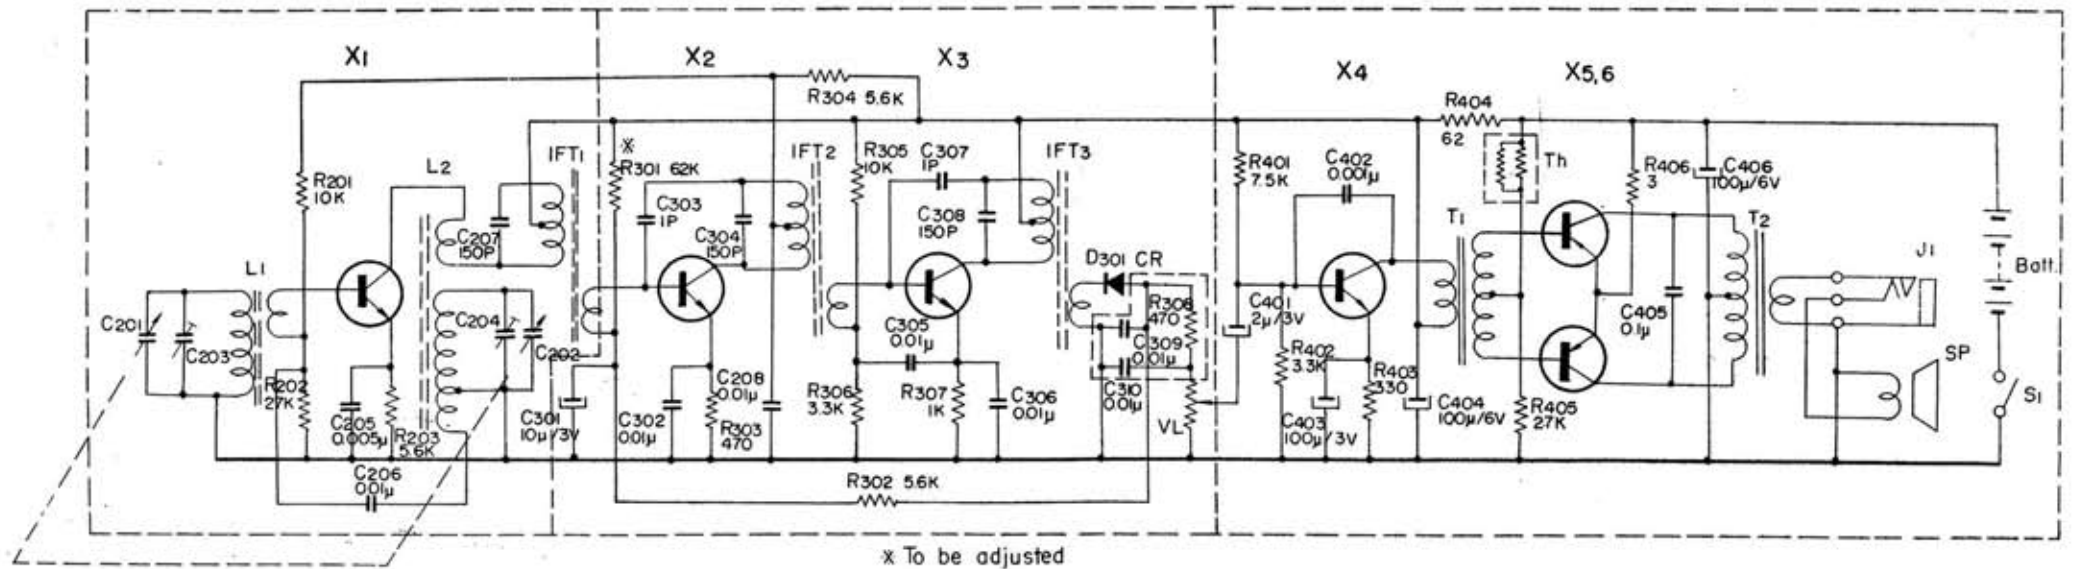

Voltage and Current Distribution Chart at Zero Signal

