



2バンド・ラジオ "ソニー TR-62"

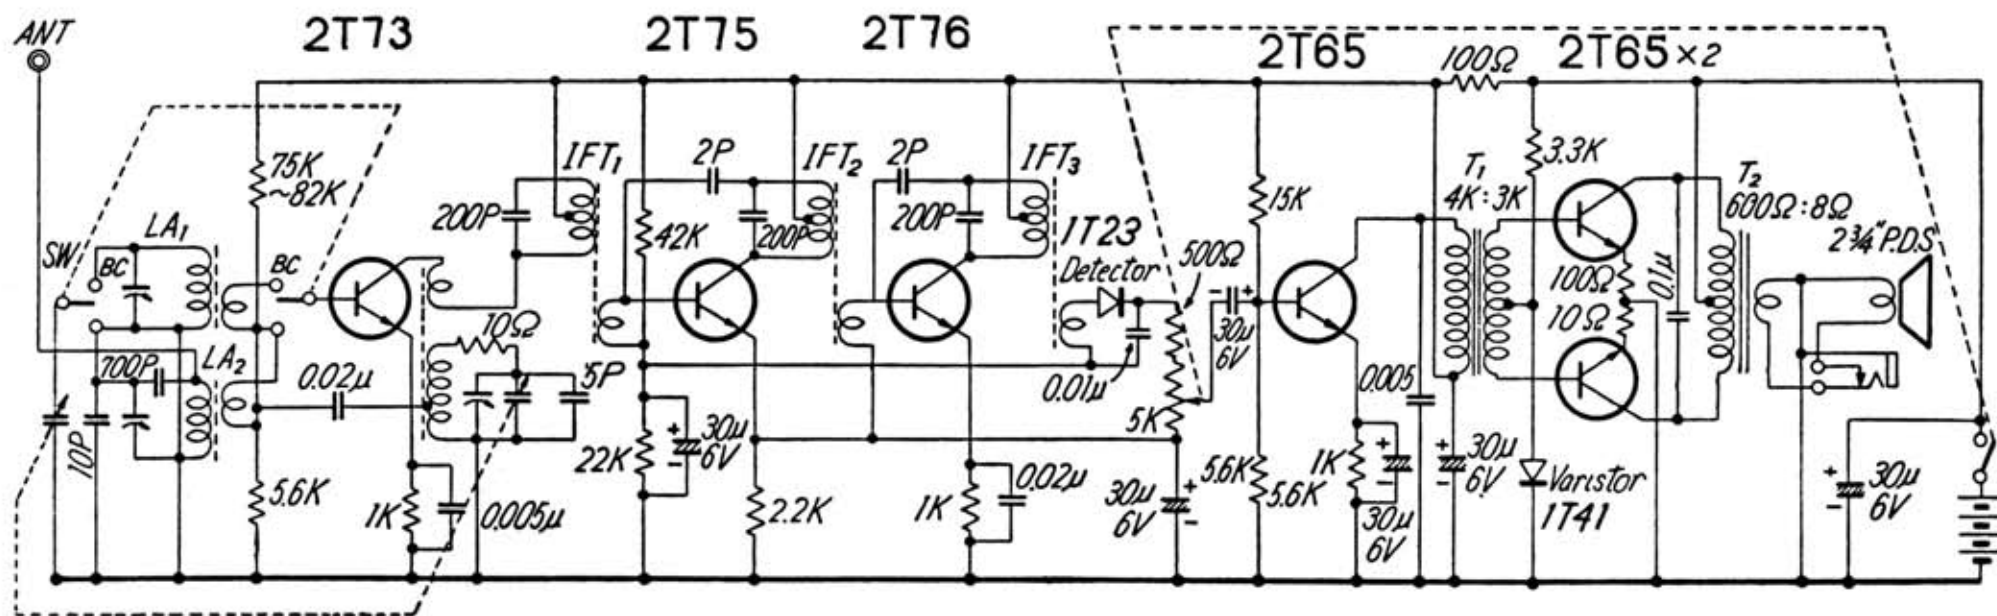

SONY TR-62

SONY

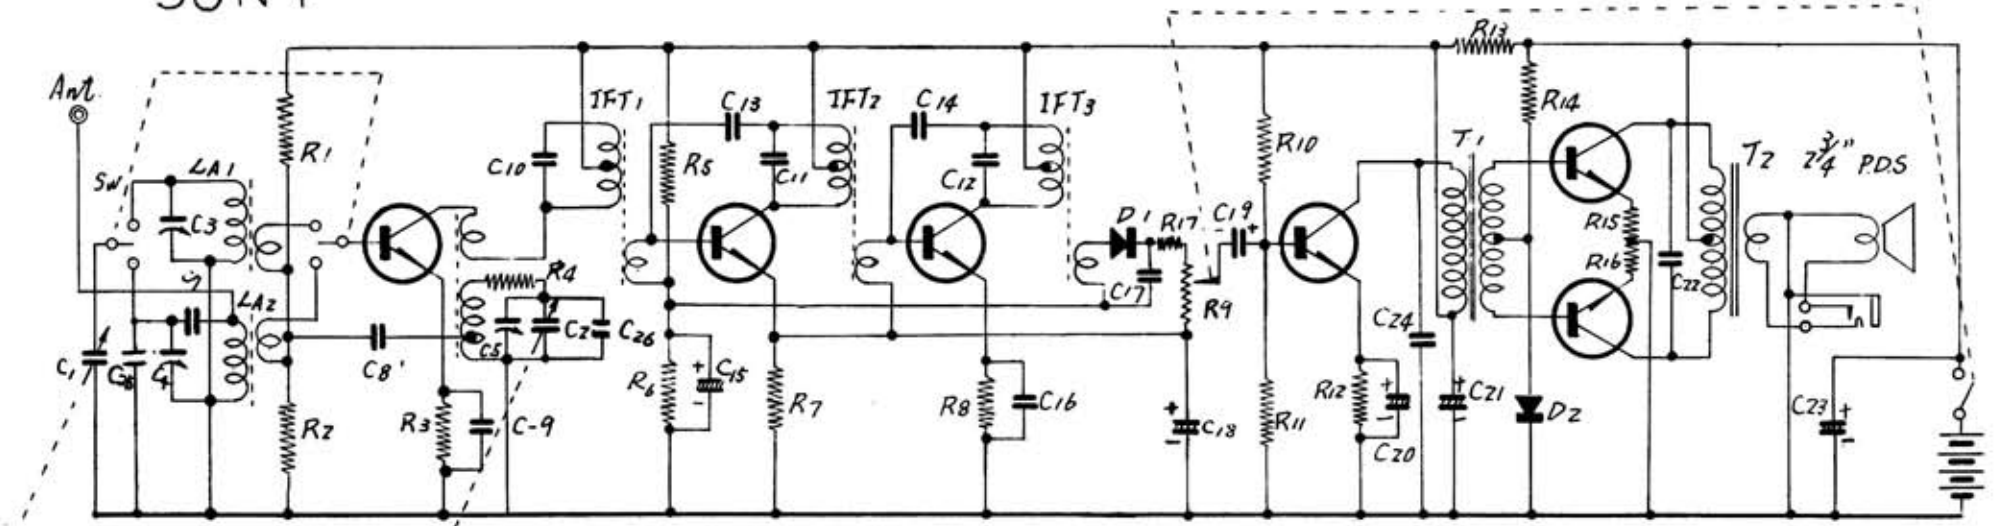

R1	2.2K 20% 1/4W	R14	3.3K 20% 1/4W	C5	VC 10% Trimmer	C18	30μF 6V 4=コ	LA1	LA-531-60
R2	5.6K " "	R15	10Ω 10% 1/4W	C6	(不要)	C19	50μF 6V "	LA2	LA-300-60 ^P Δ
R3	1K " "	R16	10Ω " "	C7	700PF 1:9-コ	C20	30μF 6V "	Loxc	123-5M
R4	10Ω " "	R17	500Ω 20% 1/4W	C8	0.02μF 14=コ	C21	30μF 6V "	IFT1	LI-51-AN
R5	33K 42K " "			C9	0.005μF " "	C22	61μF -1=コ MP	" 2	LI-51-BN
R6	22K " "			C10	200P 1:9-コ	C23	30μF 6V 4=コ	" 3	LI-51-CN
R7	22K " "			C11	200P "	C24	0.005μF 14=コ	T1	4K-3K
R8	1K " "			C12	200P "	C25	10PF 1:9-コ	T2	600Ω: 2Ω
R9	5K VR			C13	2P "	C26	5PF "	SW	11-13527
R10	15K 20% 1/4W	C1	2XC-17	C14	2P "			D1	Detector
R11	5.6K " "	C2	(national)	C15	30μF 6V 4=コ			D2	Varistor
R12	1K " "	C3	Trimer	C16	0.02μF 14=コ				
R13	100Ω " "	C4		C17	0.01μF "				

本機修理に必要(開図番号-S0205)
各種回路図
回線 A214-112

Δ	32.5.28	訂正	4	32.8.6	C16, 24 変更
②	32.6.18	C25 追加	5	33.1.14	R1, C9, C16 変更註
③	32.8.6	C26 追加	6	33.1.14	R5, R15 に追加挿入

トランスは TR-66 用トランスと同様に挿入。

32.5.25 改版