


SONY TR-726Y

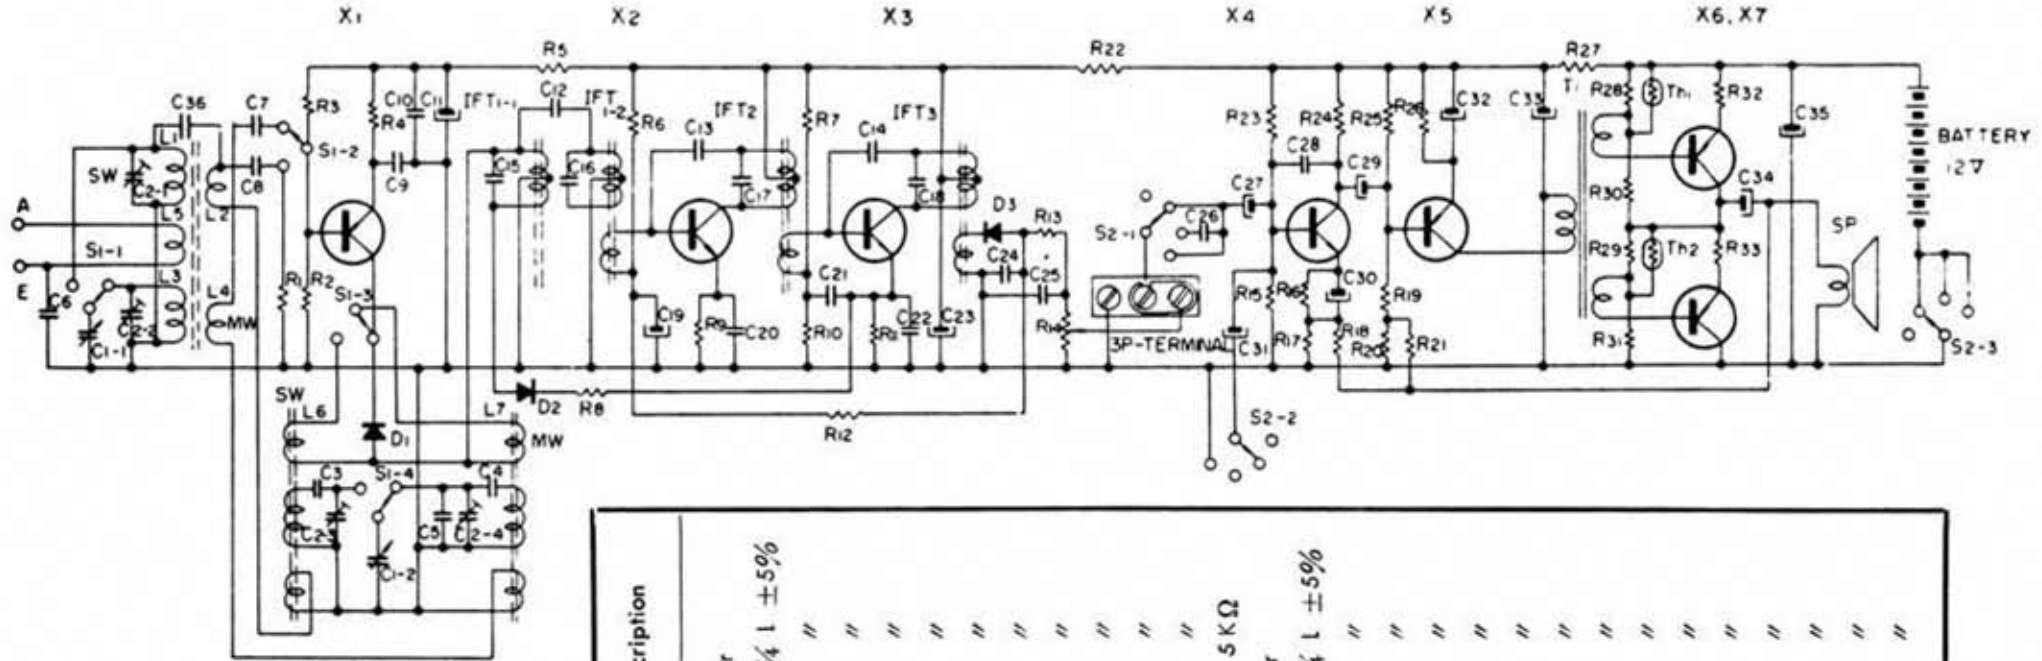

Symbol	Description	Symbol	Description
L _{1,2}	SW, Ferrite Bar Antenna	R ₃	Carbon Resistor 2.7 KΩ RD ¼ L ±5%
L _{3,4}	MW, Ferrite Bar Antenna	R ₄	"
L ₅	External Antenna Coil	R ₅	"
L ₆	SW, Oscillator Coil	*R ₆	100 KΩ
L ₇	MW, Oscillator Coil	R ₇	24 KΩ
S ₁₋₁₋₄	Band Setting Switch	R ₈	1 KΩ
S ₂₋₁₋₂	Tone Control Switch	R ₉	470 Ω
S ₂₋₃	Power Switch	R ₁₀	2.2 KΩ
IFT ₁₋₁	IF Transformer	R ₁₁	220 Ω
IFT ₁₋₂	"	R ₁₂	5.6 KΩ
IFT ₂	"	R ₁₃	470 Ω
IFT ₃	"	R ₁₄	Potentiometer 5 KΩ
T ₁	Driver Transformer	R ₁₅	Carbon Resistor 10 KΩ RD ¼ L ±5%
SP	Speaker 8 Ω	R ₁₆	1.5 KΩ
X ₁	Transistor 2SA70	R ₁₇	5.1 Ω
X ₂	" 2SC76	R ₁₈	(10 Ω
X ₃	" 2SC76	R ₁₉	15 KΩ
X ₄	" 2SD65	R ₂₀	27 KΩ
X ₅	" 2SB51	R ₂₁	100 Ω
X ₆	" 2SB26	R ₂₂	220 Ω
X ₇	" 2SB26	R ₂₃	2.2 KΩ
D ₁	Diode 1T26	R ₂₄	47 KΩ
D ₂	" 1T23	R ₂₅	4.7 KΩ
D ₃	" 1T23	R ₂₆	3.3 KΩ
Th ₁	Thermistor S-90	R ₂₇	220 Ω
Th ₂	" S-90	R ₂₈	100 Ω
R ₁	Carbon Resistor 39 KΩ RD ¼ L ±5%	R ₂₉	82 Ω
*R ₂	22 KΩ		

SERVICING GUIDE