



ソニー TA-1120A

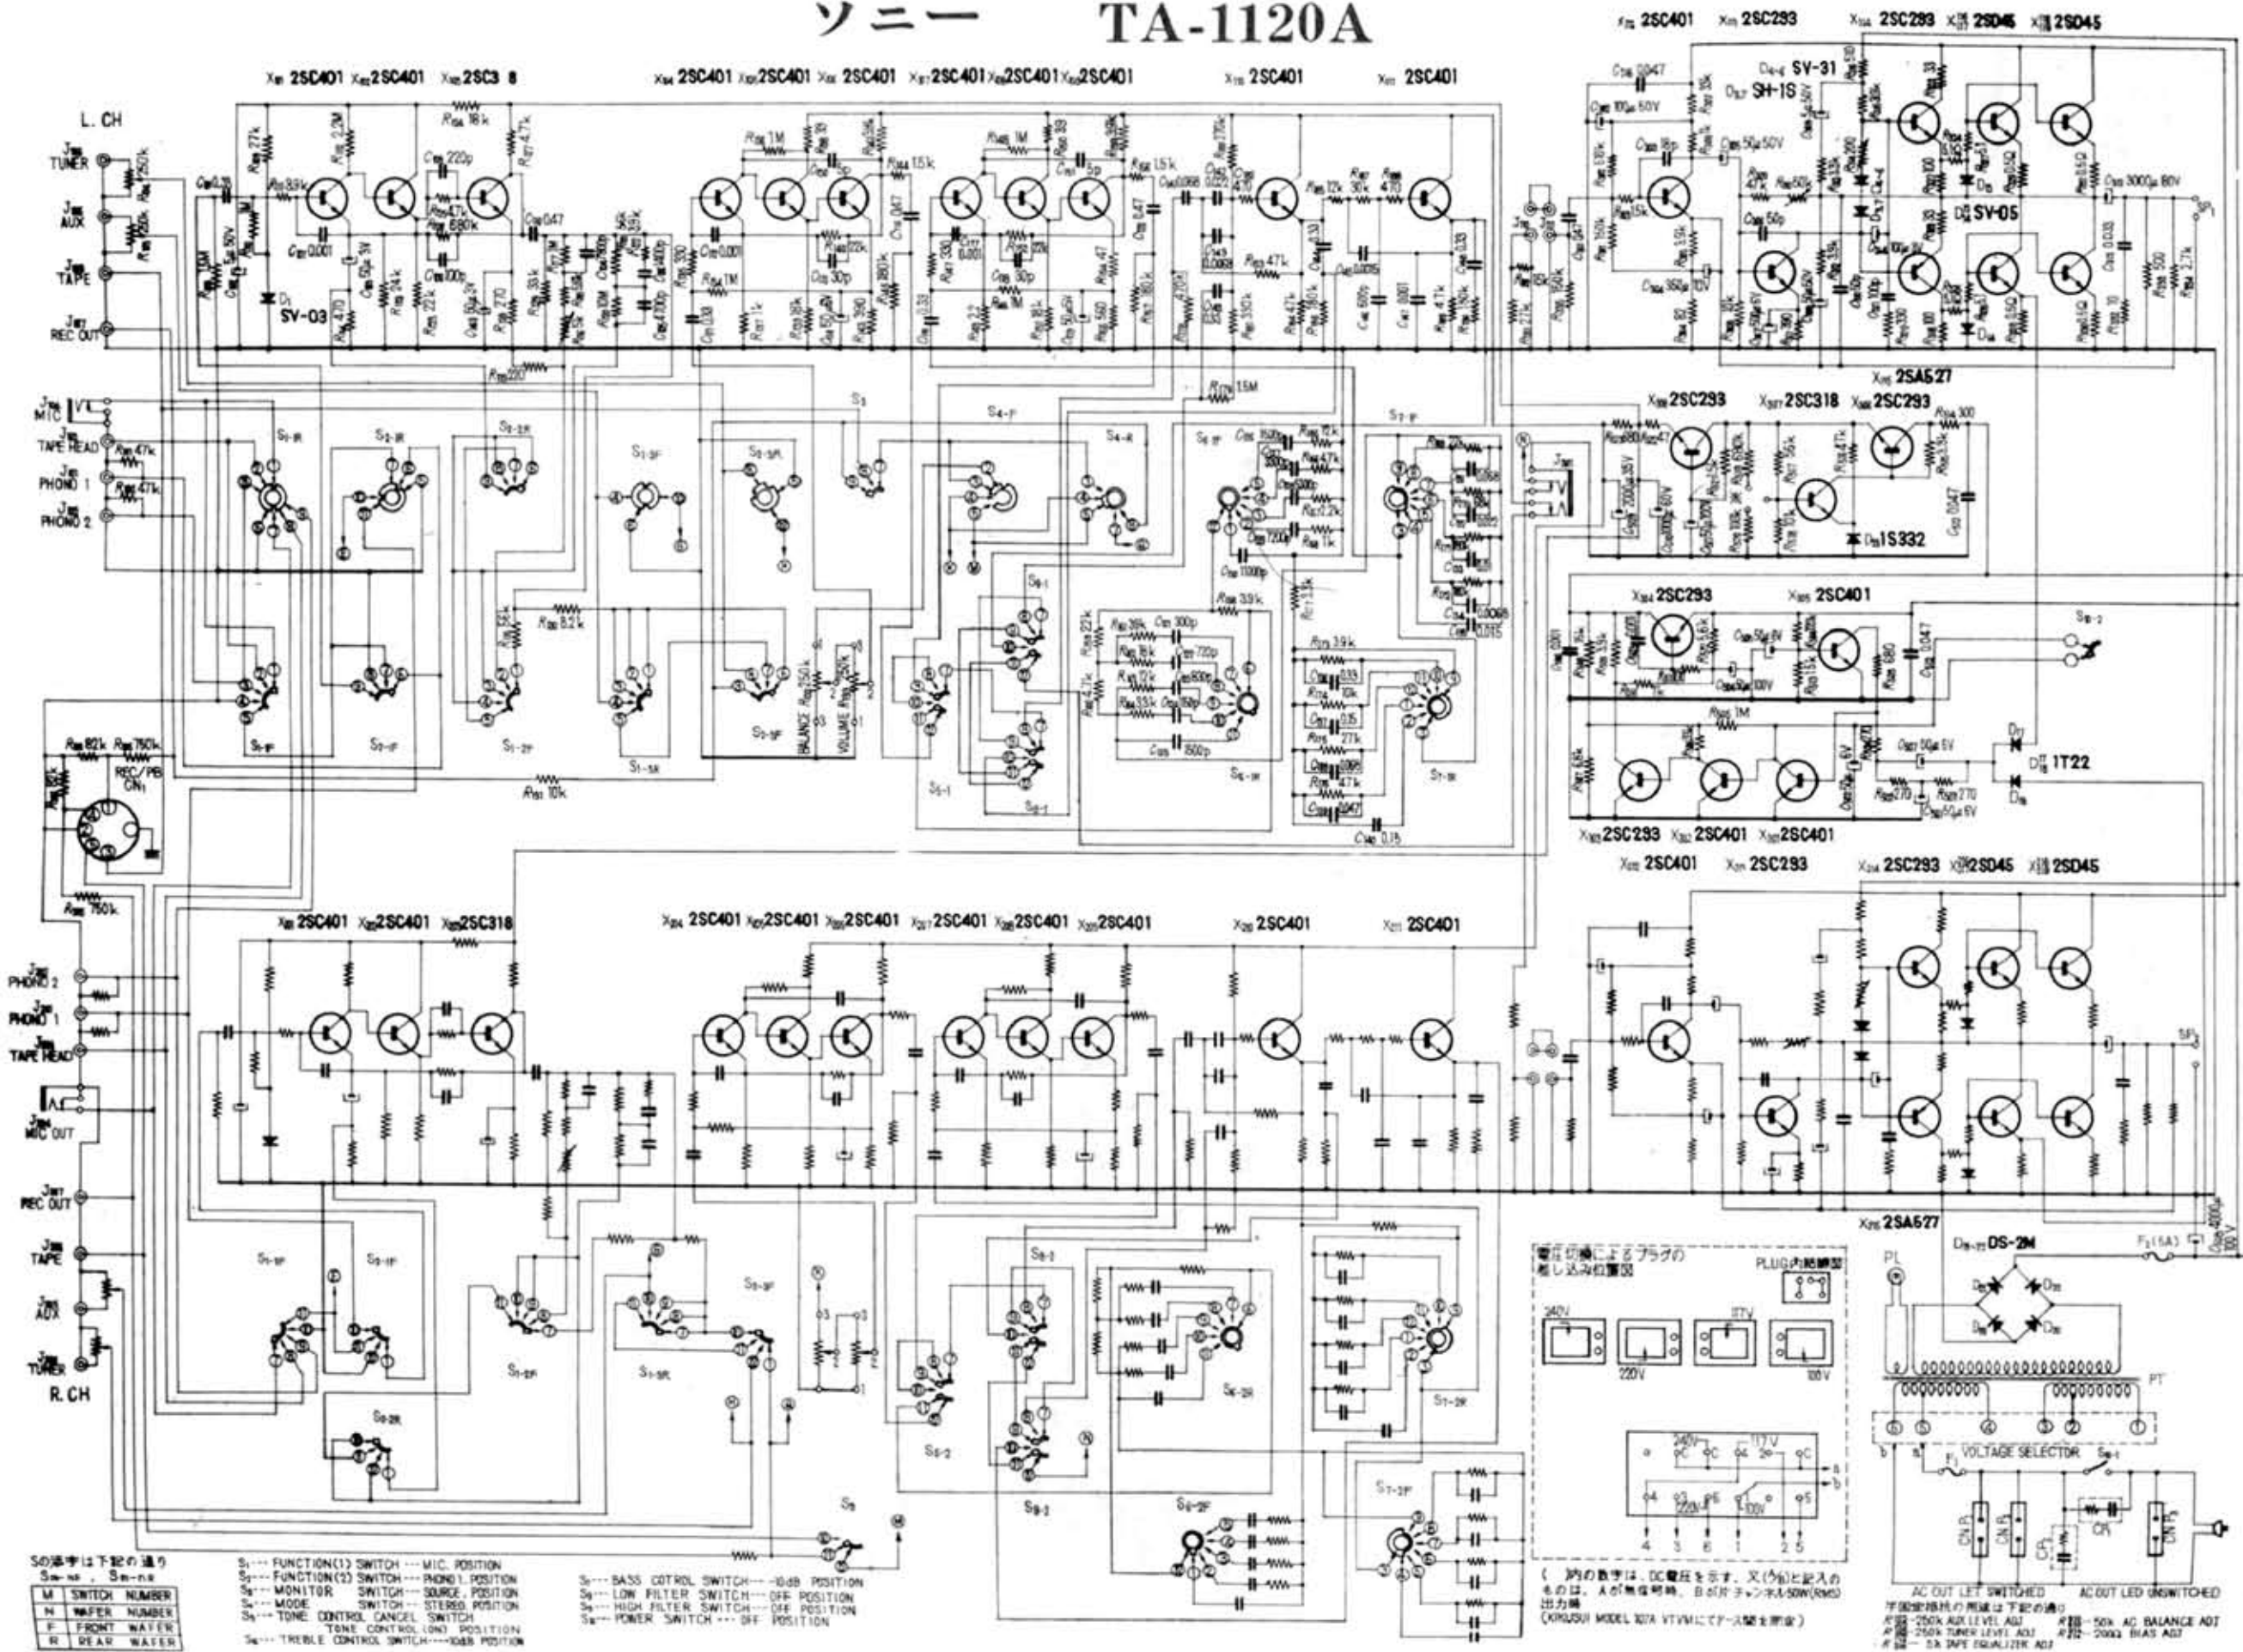

Sの番号は下記の通り
S_{m-n} S_{m-n}

M	SWITCH NUMBER
N	WAFFER NUMBER
F	FRONT WAFER
R	REAR WAFER

- S₁₋₁ FUNCTION(1) SWITCH --- MIC. POSITION
- S₁₋₂ FUNCTION(2) SWITCH --- PHONO1. POSITION
- S₁₋₃ MONITOR SWITCH --- SOURCE POSITION
- S₁₋₄ MODE SWITCH --- STEREO POSITION
- S₁₋₅ TONE CONTROL CANCEL SWITCH
- S₁₋₆ TONE CONTROL (LOW) POSITION
- S₁₋₇ TREBLE CONTROL SWITCH --- 0dB POSITION
- S₁₋₈ BASS CONTROL SWITCH --- 0dB POSITION
- S₁₋₉ LOW FILTER SWITCH --- OFF POSITION
- S₁₋₁₀ HIGH FILTER SWITCH --- OFF POSITION
- S₁₋₁₁ POWER SWITCH --- OFF POSITION

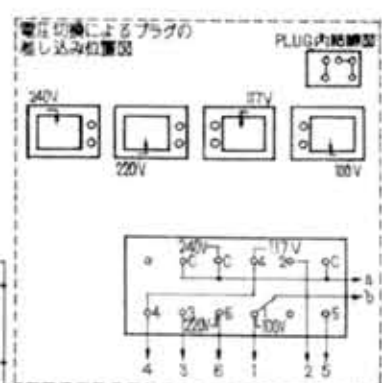

(内の数字は、DC電圧を示す。又()と記入のものは、Aが無電圧時、Bが片チャンネル1.50W(RMS)出力時)
(KIRUSHI MODEL 807A VTMにてアースを測定)

