


# ソニー TA-4300

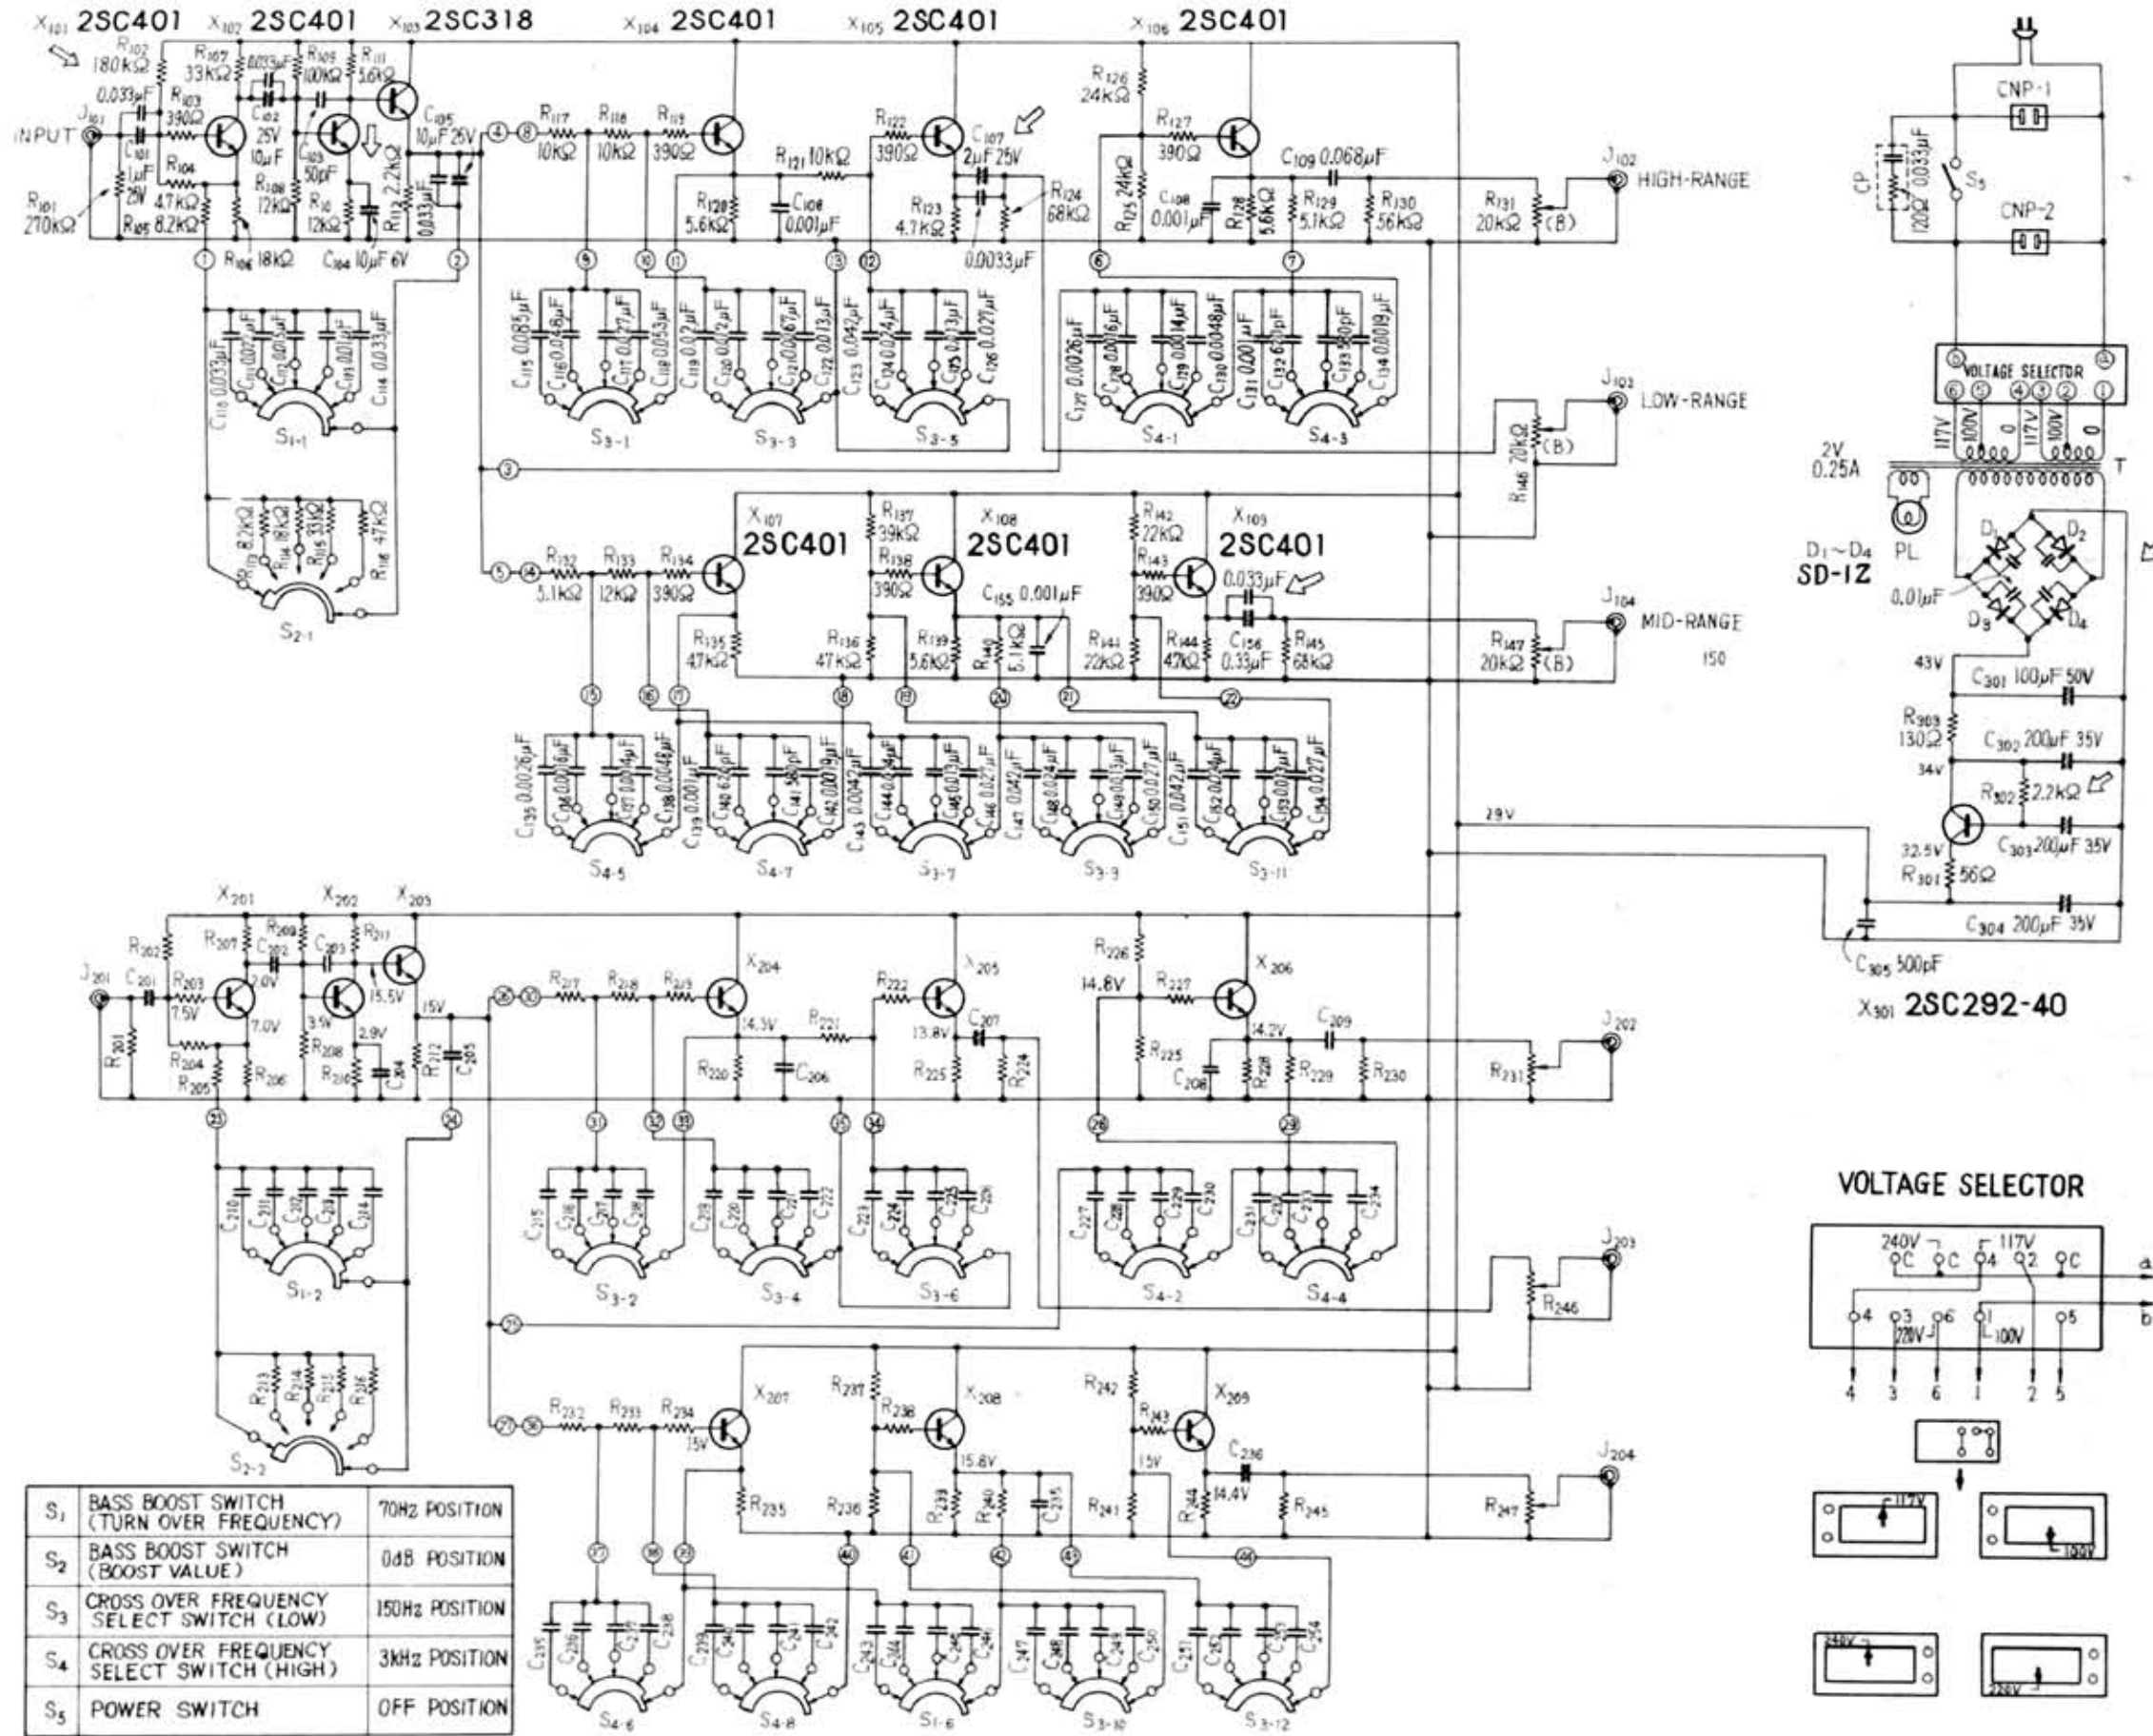

S <sub>1</sub>	BASS BOOST SWITCH (TURN OVER FREQUENCY)	70Hz POSITION
S <sub>2</sub>	BASS BOOST SWITCH (BOOST VALUE)	0dB POSITION
S <sub>3</sub>	CROSS OVER FREQUENCY SELECT SWITCH (LOW)	150Hz POSITION
S <sub>4</sub>	CROSS OVER FREQUENCY SELECT SWITCH (HIGH)	3kHz POSITION
S <sub>5</sub>	POWER SWITCH	OFF POSITION