


SONY 7R-76

X1 2SC403 X3 2SA202 X4 2SA203 D2 1S426G X5 2SB186 X6 2SB186 X7,8 2SB187 X 2

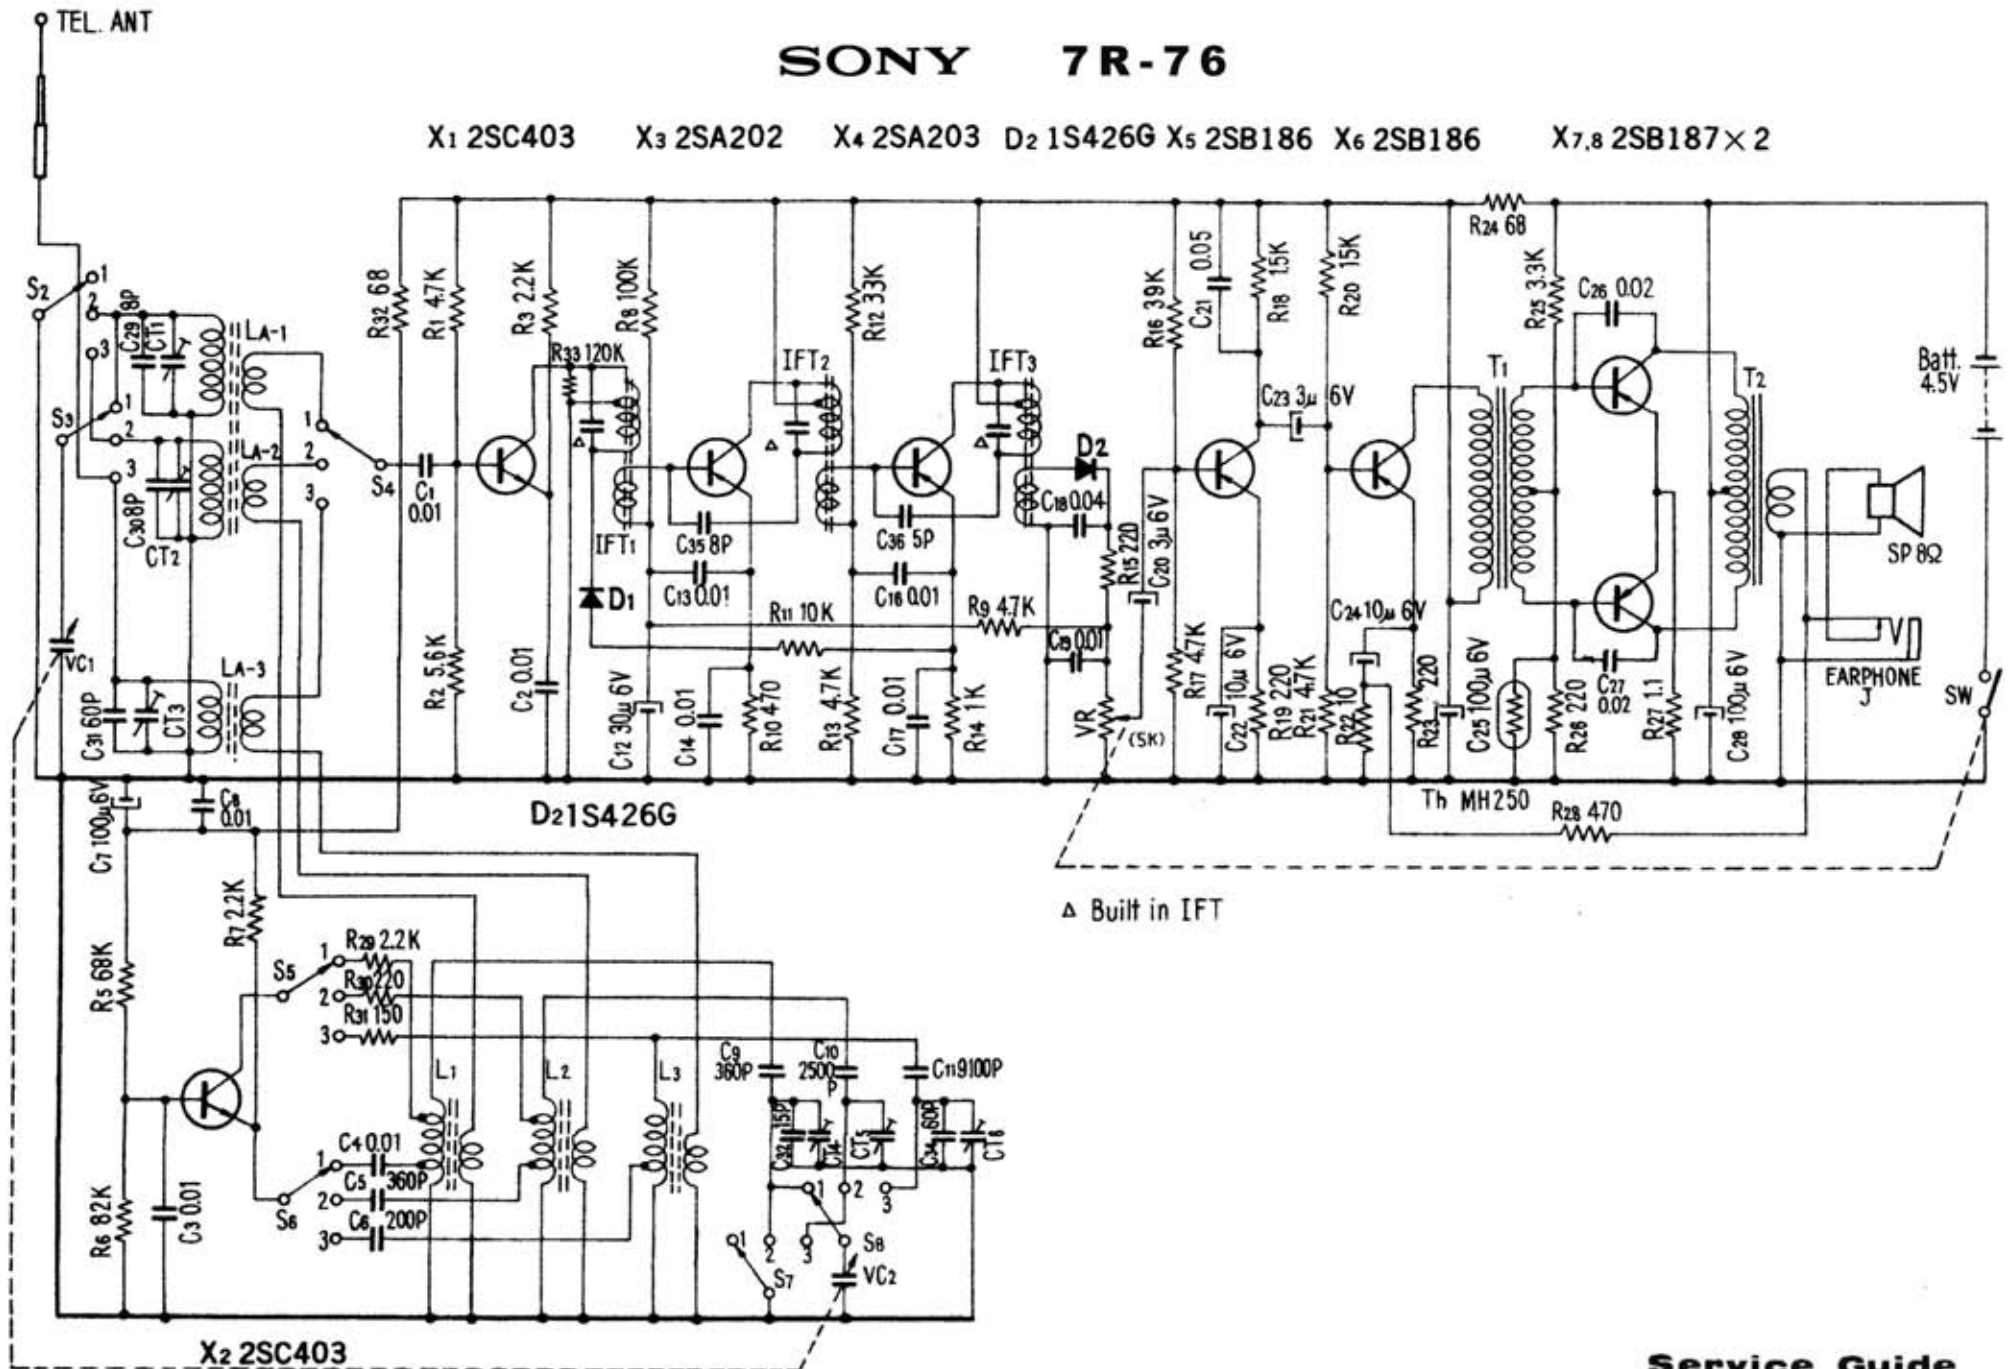

Service Guide