

SONY 8R-42

X1 2SA330


X2 2SA202

X3 2SA203

D1 1S426

X4 2SB186

X5,6 2SB187 × 2

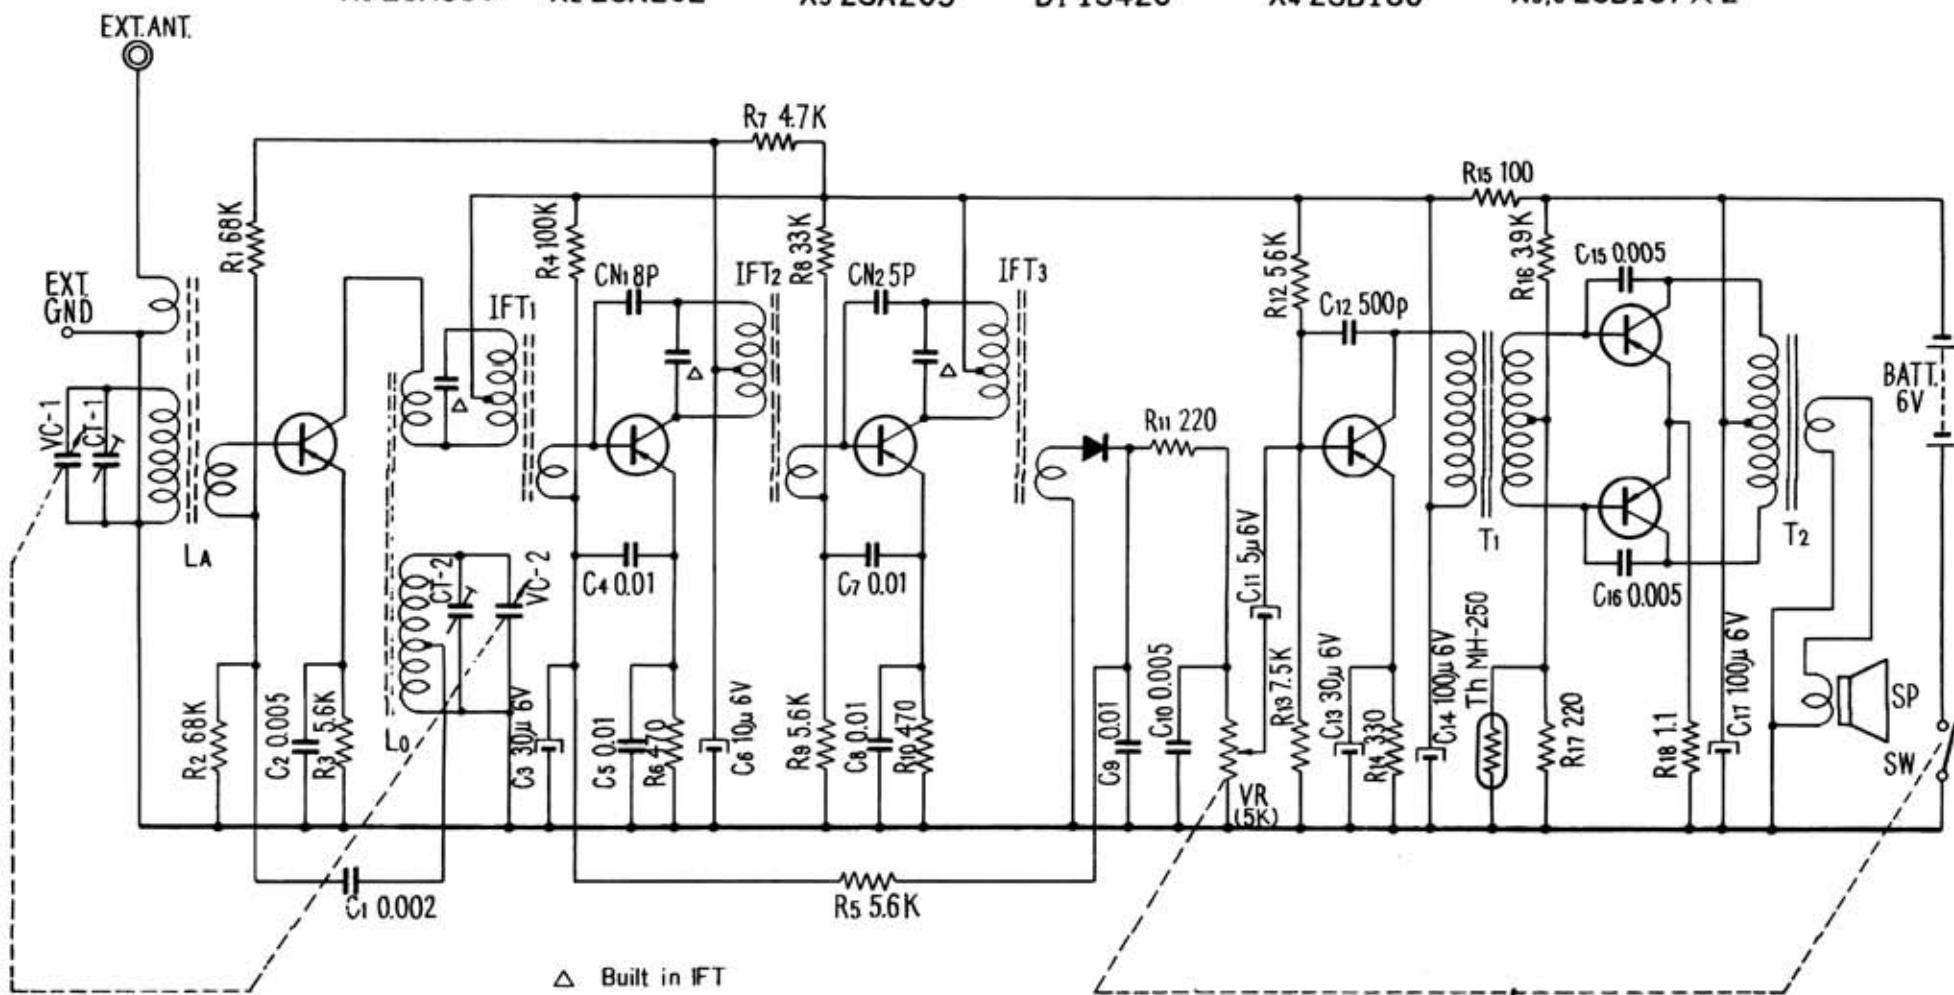

Service Guide