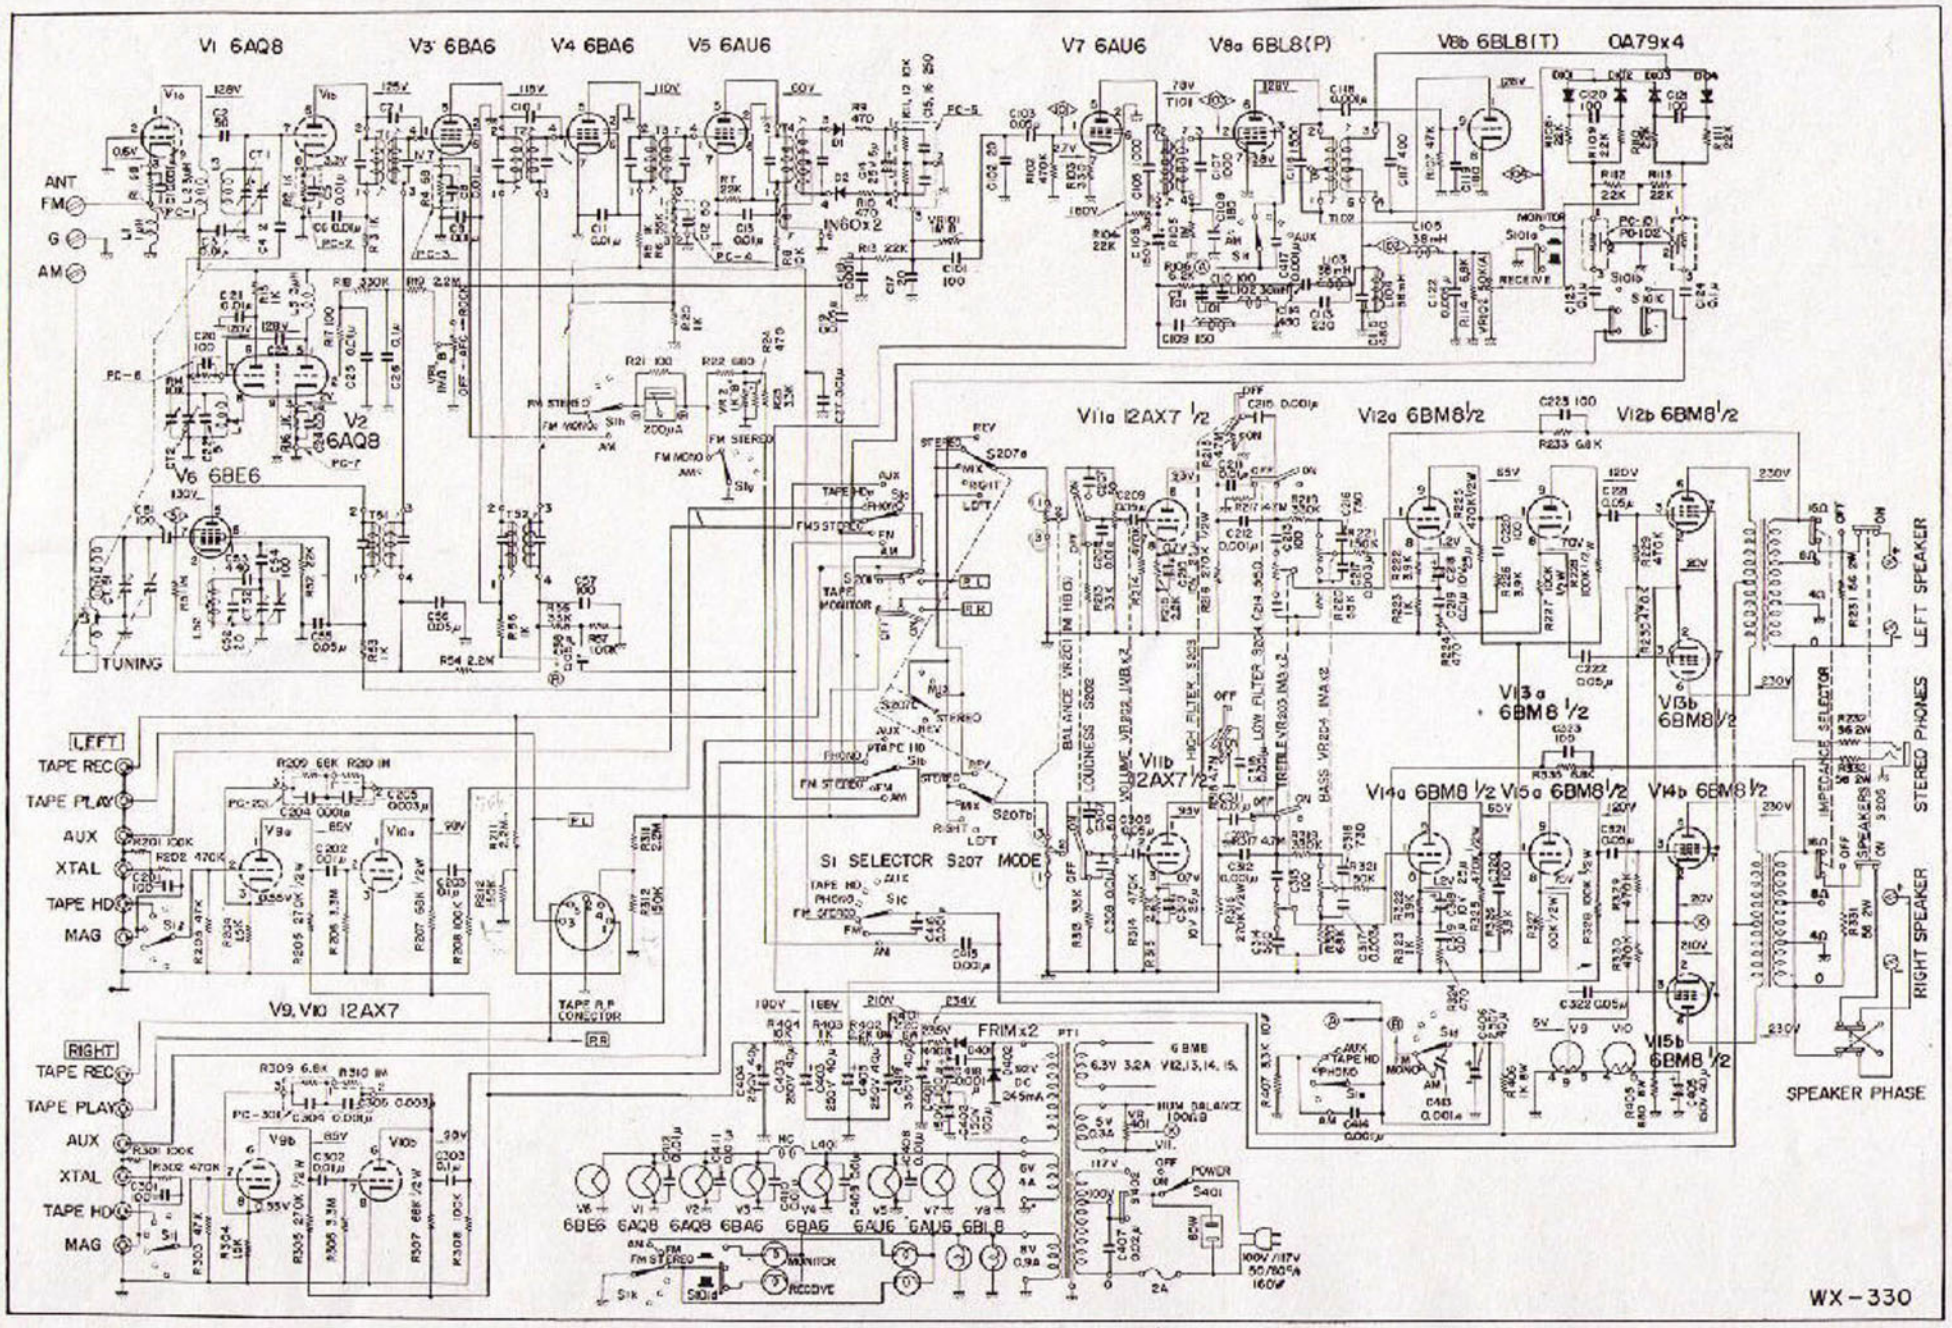
V1 6AQ8
V3 6BA6
V4 6BA6
V5 6AU6
V7 6AU6
V8a 6BL8(P)
V8b 6BL8(T)
OA79x4
ANT
FM
G
AM
V2 6AQ8
V6 6BE6
TUNING
V11a 12AX7 1/2
V12a 6BM8 1/2
V12b 6BM8 1/2
V13a 6BM8 1/2
V13b 6BM8 1/2
V11b 12AX7 1/2
V14a 6BM8 1/2
V15a 6BM8 1/2
V14b 6BM8 1/2
V15b 6BM8 1/2
LEFT
TAPE REC
TAPE PLAY
AUX
XTAL
TAPE HD
MAG
RIGHT
TAPE REC
TAPE PLAY
AUX
XTAL
TAPE HD
MAG
V9, V10 12AX7
TAPE A.P. CONNECTOR
S1 SELECTOR S207 MODE
FRIM x2
6BE6 6AQ8 6BA6 6BA6 6AU6 6AU5 6BL8
POWER
LEFT SPEAKER
STEREO PHONES
RIGHT SPEAKER
SPEAKER PHASE
WX-330