


CIRCUIT DIAGRAM WH-999

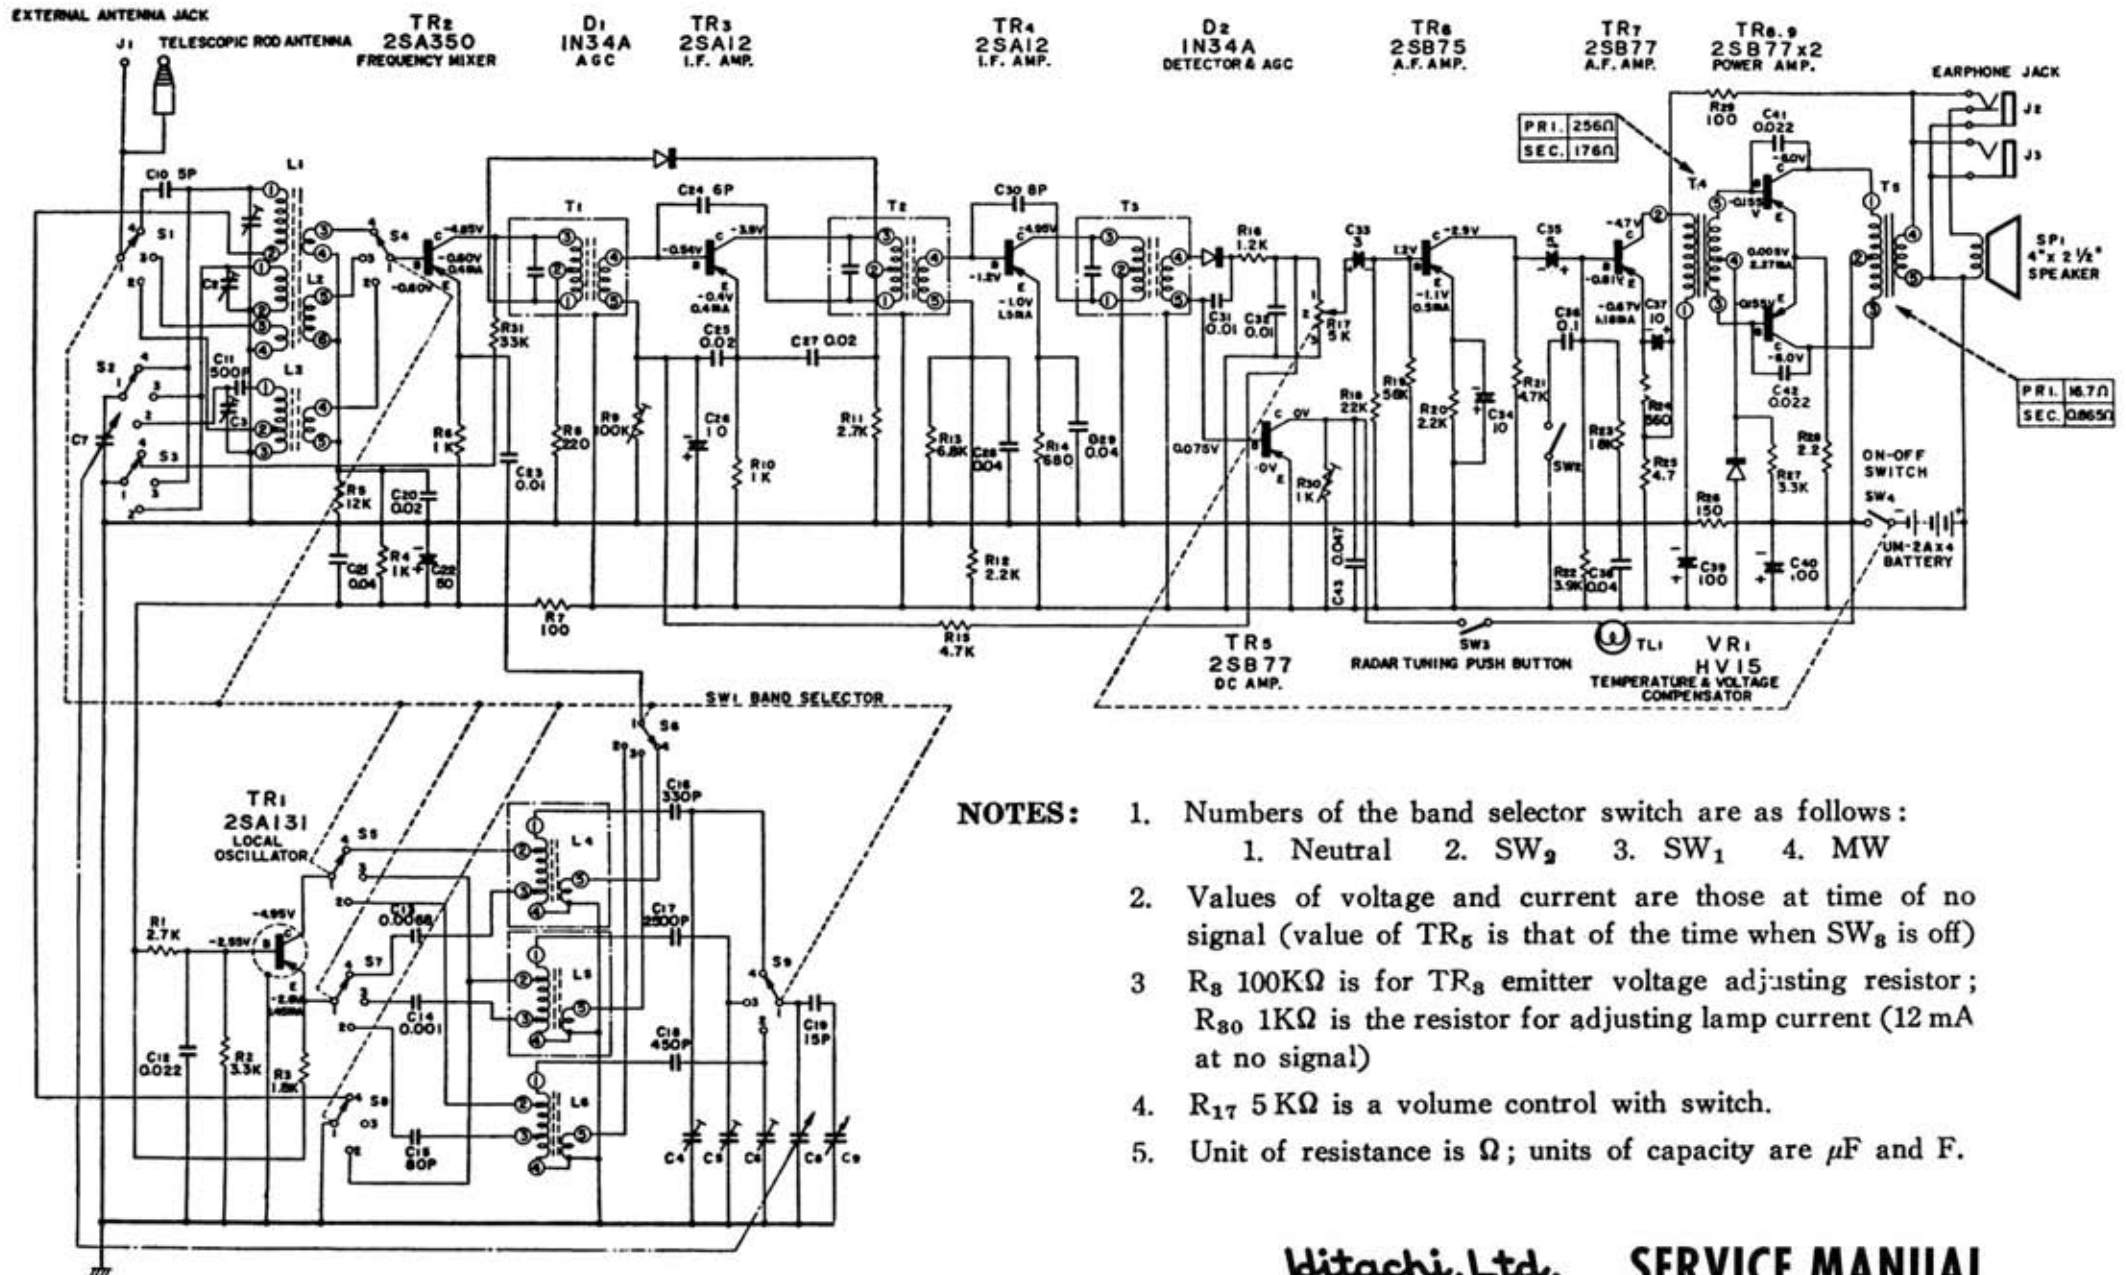

- NOTES:**
1. Numbers of the band selector switch are as follows :
 1. Neutral 2. SW₂ 3. SW₁ 4. MW
 2. Values of voltage and current are those at time of no signal (value of TR₈ is that of the time when SW₈ is off)
 3. R₈ 100KΩ is for TR₃ emitter voltage adjusting resistor ; R₃₀ 1KΩ is the resistor for adjusting lamp current (12 mA at no signal)
 4. R₁₇ 5KΩ is a volume control with switch.
 5. Unit of resistance is Ω ; units of capacity are μF and F.